
Touch LCD Monitor

 
TM Series

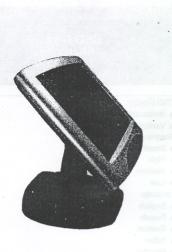

User Manual

M anual Verson v1.3 Revised Date: 27/2/2003

1. Control Panel




1.1 Push Button

Push Button	Description of Function
Р	Power On/Off
A	Auto Setting
▼	Selection of Menu
+-	Change and Selection for Detail of Each Setting
R	System Reset (This function is only available for this
	monitor embedded on IT-1000.)

150 g

1.2 LED Indicator	
LED Signal	Description of Function
LED 1 in Green	There is VGA signal to monitor.
LED 2 in Red	There is no VGA signal to monitor.

 2. I/O Connector



Index of Contents

Attention

- This manual contains important information for the proper setup and maintenance of the products. Before setup and using of the products, please read through this manual clearly.
 This specification shall apply only to the product(s) coming along with this manual inside.
- The specification may be modified without any notice in advance. Please inquire your supplier for latest specification, driver, or manual.

M anual Verson v1. 3 Revised Date : 27/2/2003

3. OSD Function

 
3.1 Brightness

To adjust brightness of LCD screen




3.2 Contrast

To adjust contrast of LCD screen




3.3 Display

 To adjust horizontal and vertical position of display



To adjust "RGB Adjust" about color.

 

※ RGB Adjust

- Red Corrected
- Green Corrected
- Blue Corrected

3.5 Clock/Phase

To adjust clock and phase



Manual Version v1.3 Revised Date : 27/2/2003

4. Cleaning and Safety

4.1 Cleaning Touch LCD Monitor

Before chaning, phase power off the computer system and disconnect the montor from the ACouthet to prevent the damage. After frishing of chaning, phase make sure the montor is completely dry before you reconnect the cables and power ton. Do not use any build or spray chaners directly on surface of screen or cabinet. Phase use a soft, chan, ht-free cbth with chaners to char your montor.

4.2 Screen

Rease use a soft, clean, ht-free cbth to remove the dust and drt from your montor. For the fingerprints and smudges, please use a soft cbth with cleaners to clean them,

4.3 Case

Please clean the cabinet of monitor with a soft couth sightly moist ened with a mild detergent solution. Please rise the couth with clear water, wring t dry, and wipe the cabinet to remove any detergent residue.

4.4 Safety

- (1) To reduce risk of electric shock, please flow all safety notices, never open the case of monitor by yourself, and turn off the power before cleaning.
- (2) The montor is equipped with a 3-wire, grounding power cord. The power cord plug only fit into a three-prong safety ground outlet. Do not attempt to fit the plug into an outlet that has net been configured for this purpose. Do not use a damaged power cord. Please use the only power cord that comes with your montor. Using an unauthorized power cord may invalidate the werranty of the products.
- (3) Pease do not insert or block anything inside the four internal edges of the screen.
- (4) Fease remain dry for montor when you use. Pease do not pour build hit o or onto montor. If your montor becomes wet, pease do not attempt to repair by yoursef and pease ask a quafied service technician to check t before you turn on the power.

To adjust "OSD Display", "Sharpness", "Language", and "Recall Factory Setting" about LCD and OSD function.



※ OSD Display

- Horizontal Position of OSD Display
- Vertical Position of OSD Display

Sharpness

- Smart Sharpness
- High
- Medium
- Language
- English
- French
- German
- ItalianEspañol

Manual Version v1.3 Revised Date: 27/2/2003

Care and handling of your touch monitor

The following tips while you keep your touch monitor functioning at the online alstuation:



Please protect your touch montor away from extremely high or bw-temperatures.



Pease keep your touch montor dry and away from humid environment.



Please do not wash with a wet obth or pour fluid on t.



Under the condensation for your touch monitor, please do not power on until the condensation is evaporated completely.



Pease keep your touch montor away from bumps and drops.



Please keep your touch monitor away from dust, sand, and $\mbox{dirt}\,.$