

USER SETUP UTILITY V2.00


Manual



1. Configuration and Function

User Interface

Main Dialog

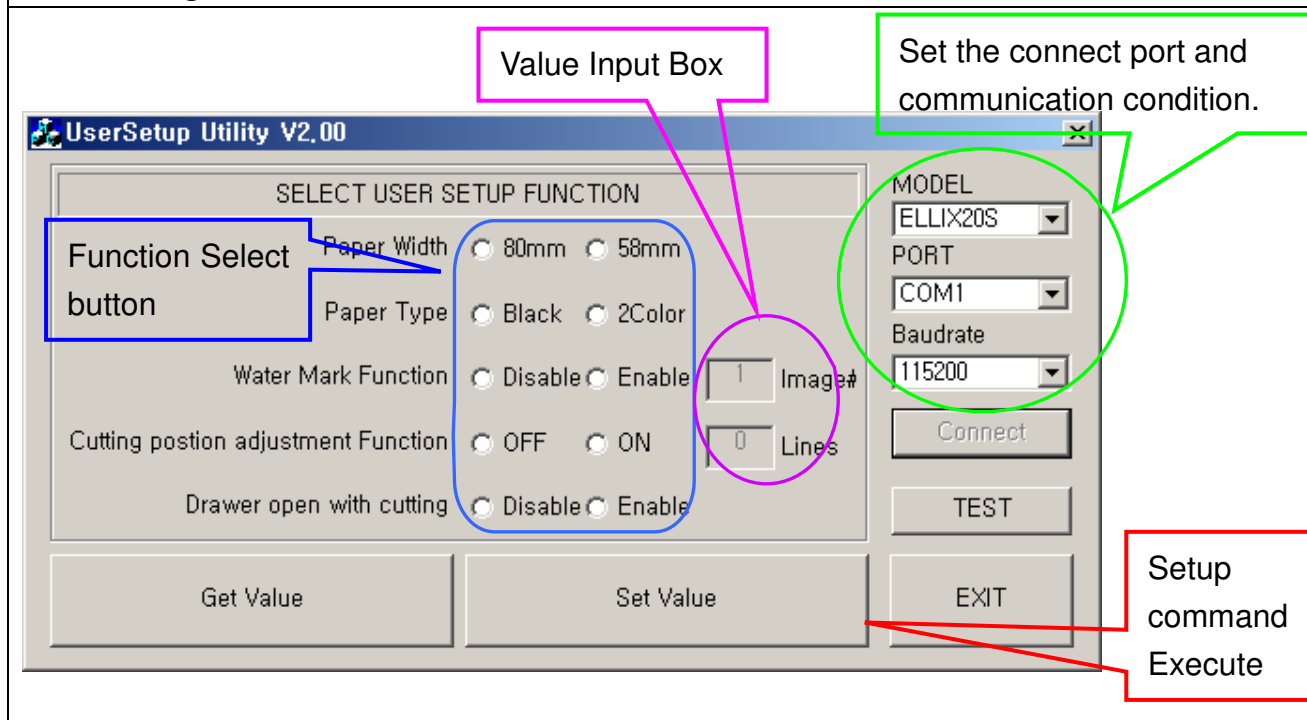

Function Description

Select paper width : 80mm/58mm	Select the paper width for print. It can set the paper 58mm or 80mm width. Default paper width is 80mm.
Select One/Two Color paper type	Select the paper type. ELLIX20 can use the one or two color paper type for mono/color print. (Color is possible blue or red print by the color thermal print paper type.)
Select WaterMark ON/OFF (Operate Firmware Version : Over STD1.23)	Select the background image print function ON/OFF(WaterMark print). If you want WaterMark print, you must input the image number that had been stored by Image download utility.
Select Adjust Feed Enable/Disable (Operate Firmware Version : Over STD1.23)	This function is work the paper feed before auto-cutter operation for adjust the cutting position. If select adjust feed enable, you must input the line count for paper feed.
Enable/Disable Drawer with Auto-cutter. (Operate Firmware Version : Over STD1.27)	This function is work drawer open when process auto-cutter operation command. If you need control the drawer and auto-cutter, setup this function to enable. (Default : Disable)

2. Operation sequence

- 1) Connect the ELLIX20 to PC and turn the ELLIX20 on with install the paper roll.
- 2) Run the User Setup Utility on your PC.
- 3) Select the Model by your interface.
- 4) Select the port by your printer interface type.
(If you use the COM port, select other condition to same value of your printer; check the self-test sheet for check your printer's setting condition.)
- 5) Click the "CONNECT" button.
- 6) If you use "ELLIX20S(Serial interface)", click the "GET VALUE" for get your printer's present setting value.(Firmware version : [STD 1.27](#) or later, Only [serial interface](#))
- 7) Select the function and click the "SET VALUE" button.
- 8) After 1~2 second the click the button, the printer will reset with some motor feed.
If the printer does not feed some paper, please check the cable connection or condition of communication.

< Notes >

- WaterMark print function use the NV image that stored in ELLIX20. You can download the NV image by Image download utility. If the NV image is not exist in ELLIX20, this function does not work.
(WaterMark print function is not operate under bar-code or image printing.)
- All User setting value are store in NV memory of the ELLIX20. So it is not change by printer power off and on.