
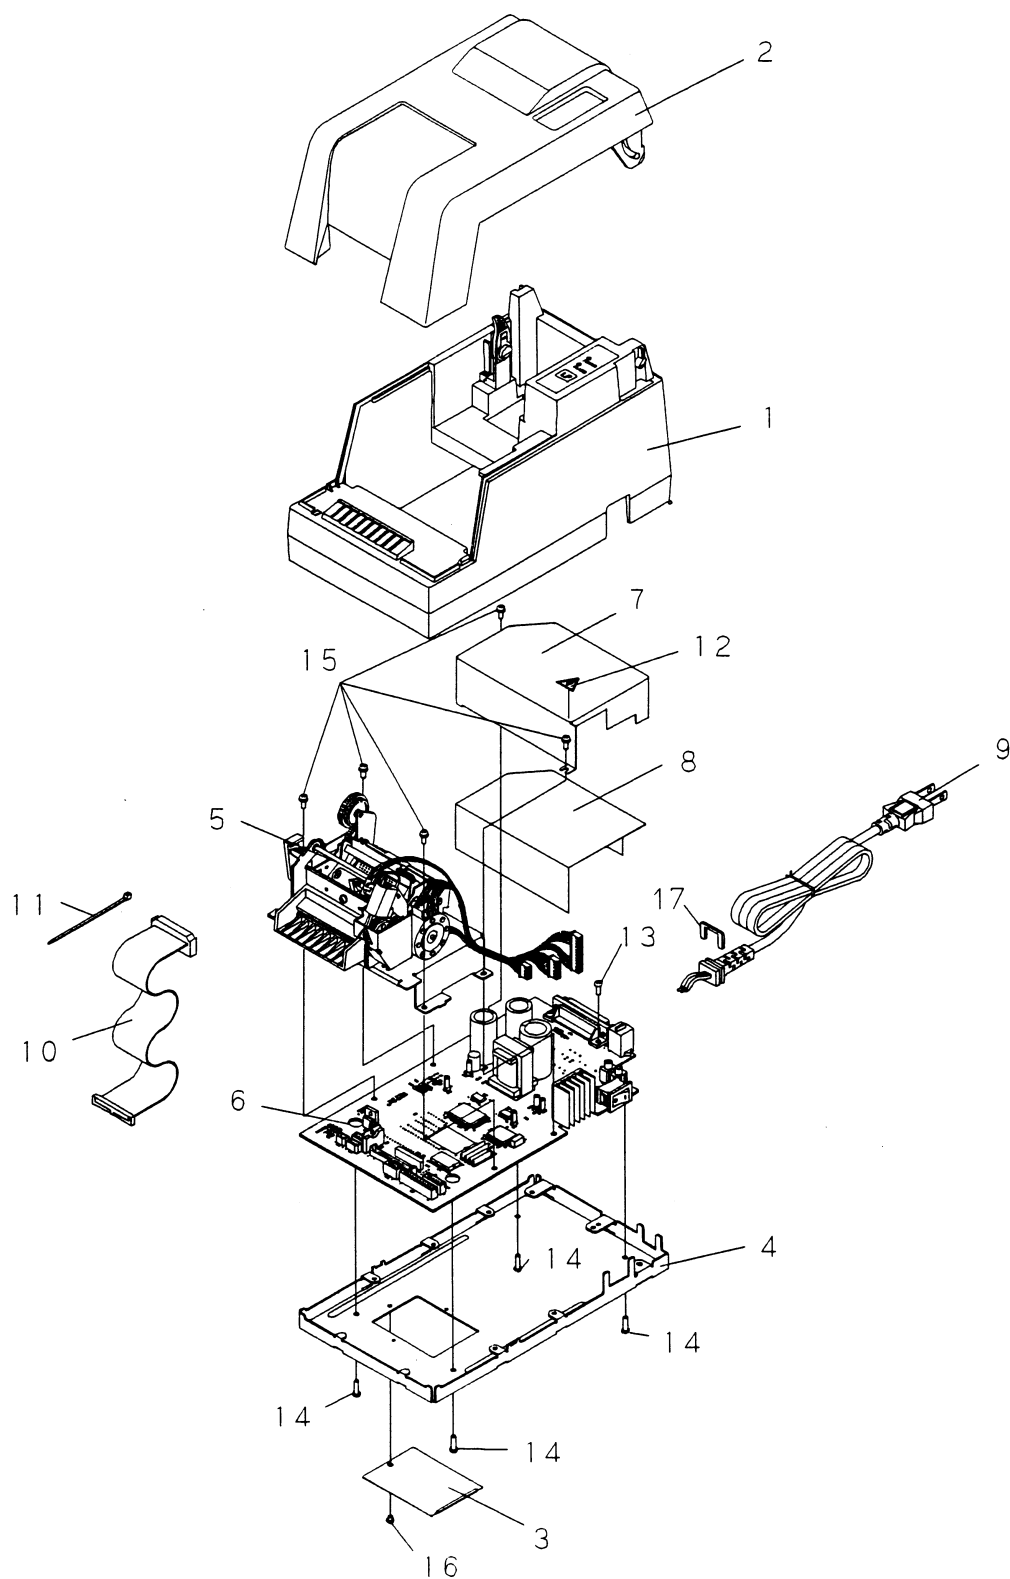
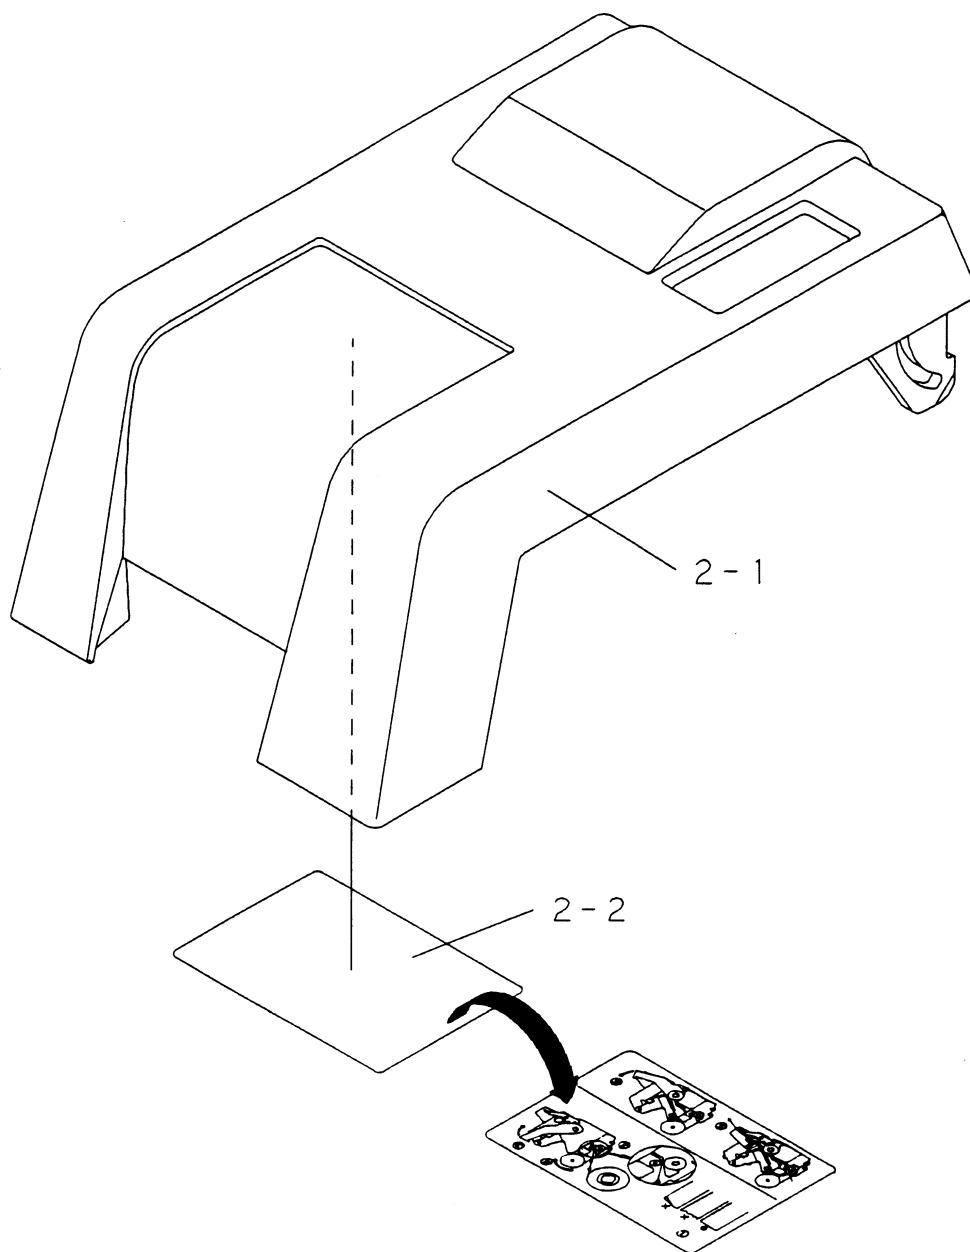
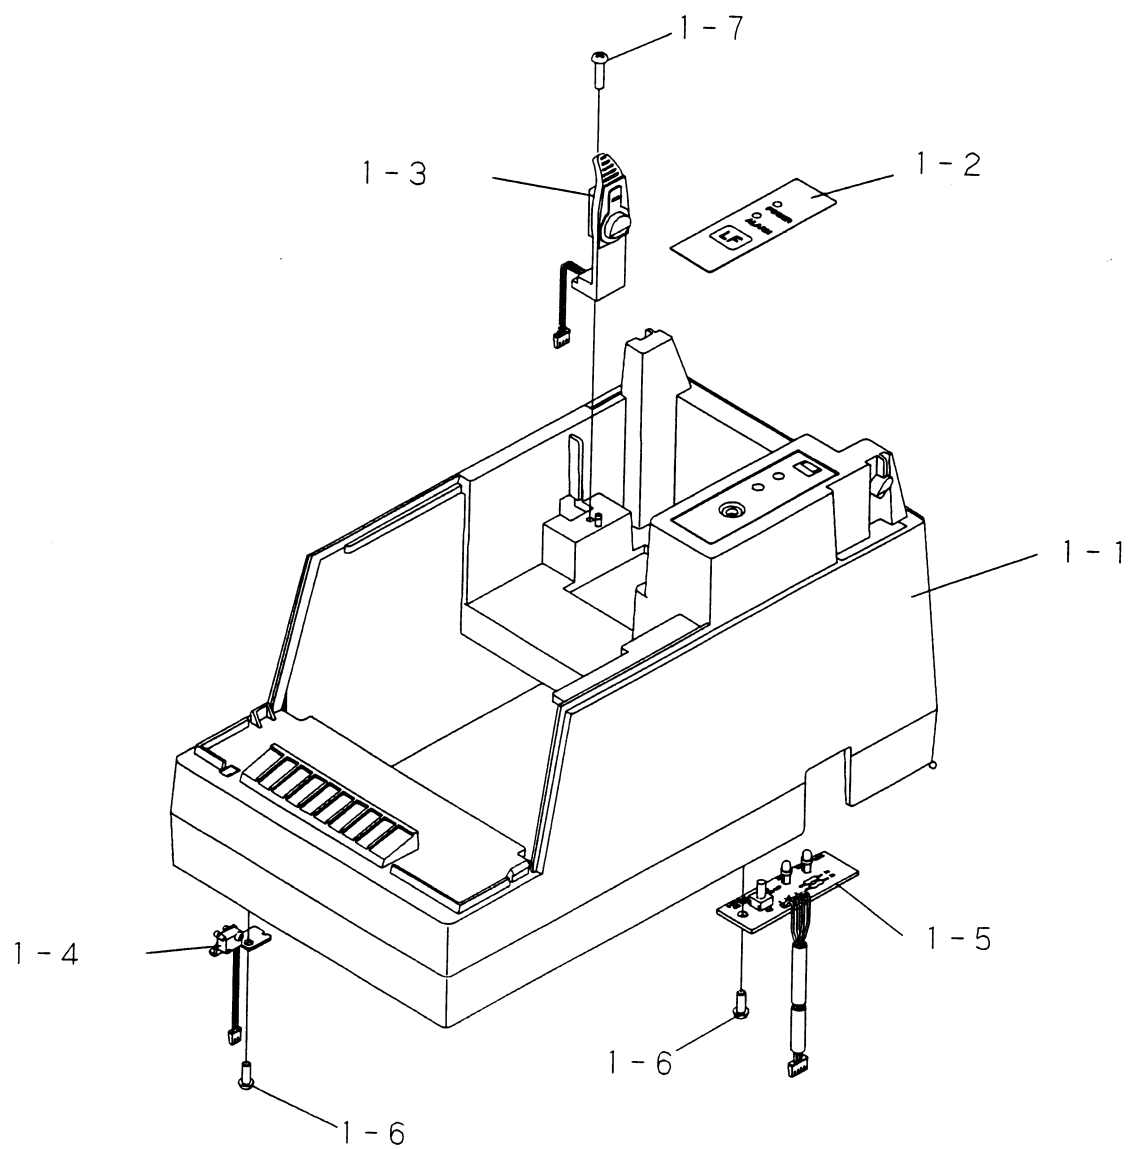



Disassembly Diagram 1


Disassembly Diagram 2

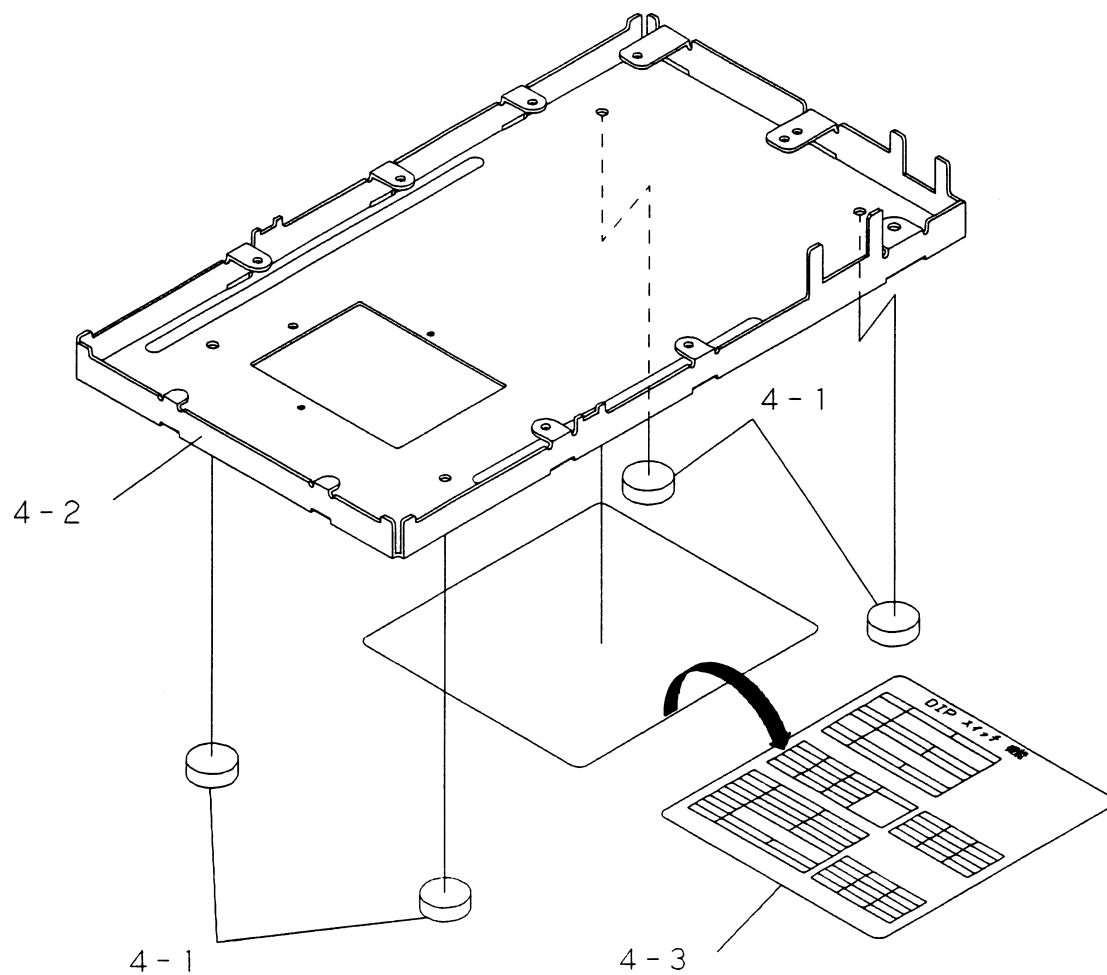


Disassembly Diagram 3

Disassembly Diagram 4

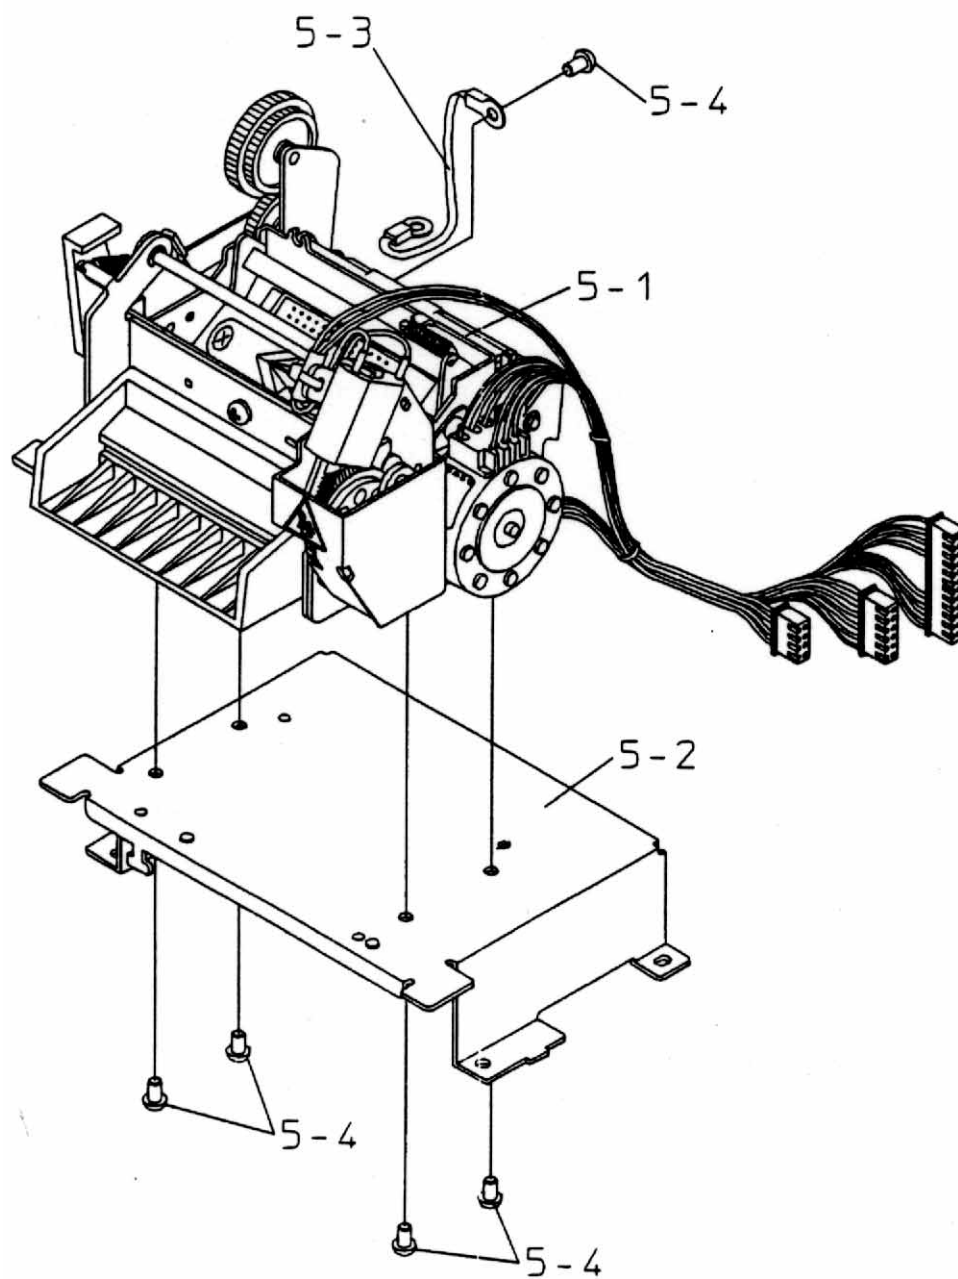Disassembly Diagram 5

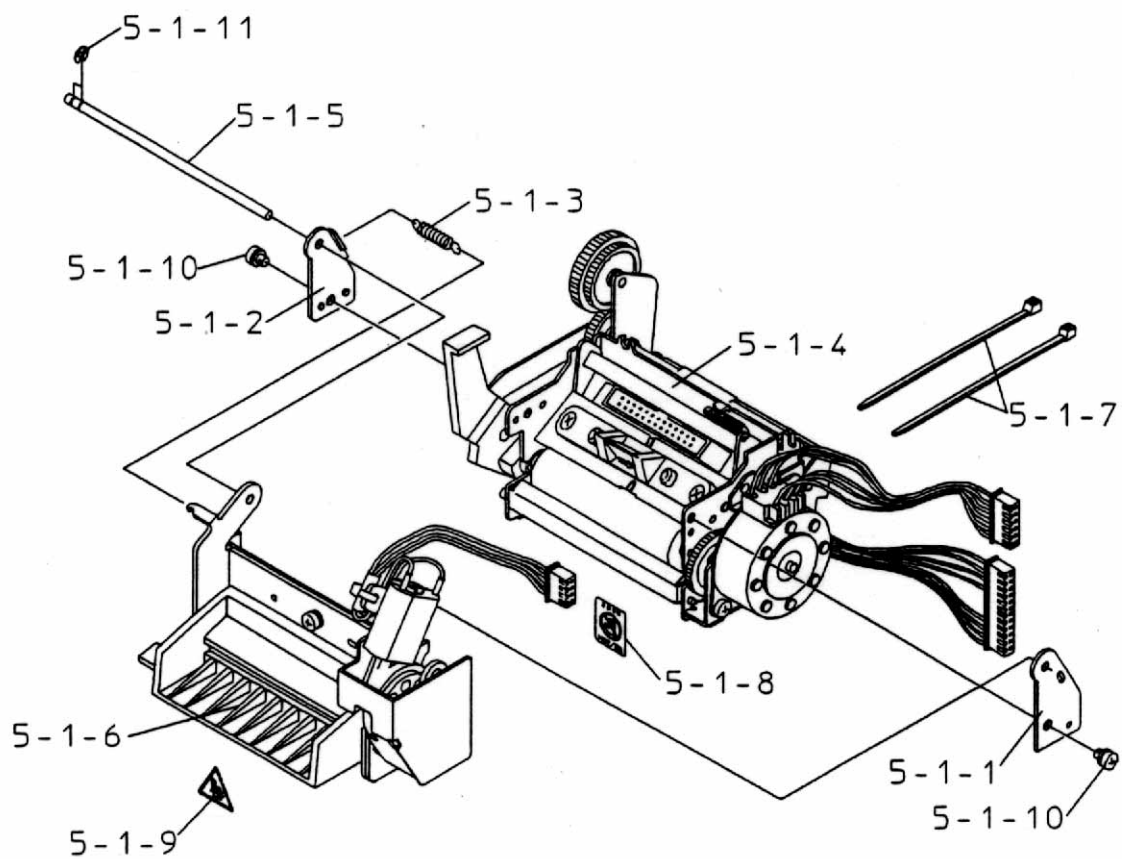Disassembly Diagram 6

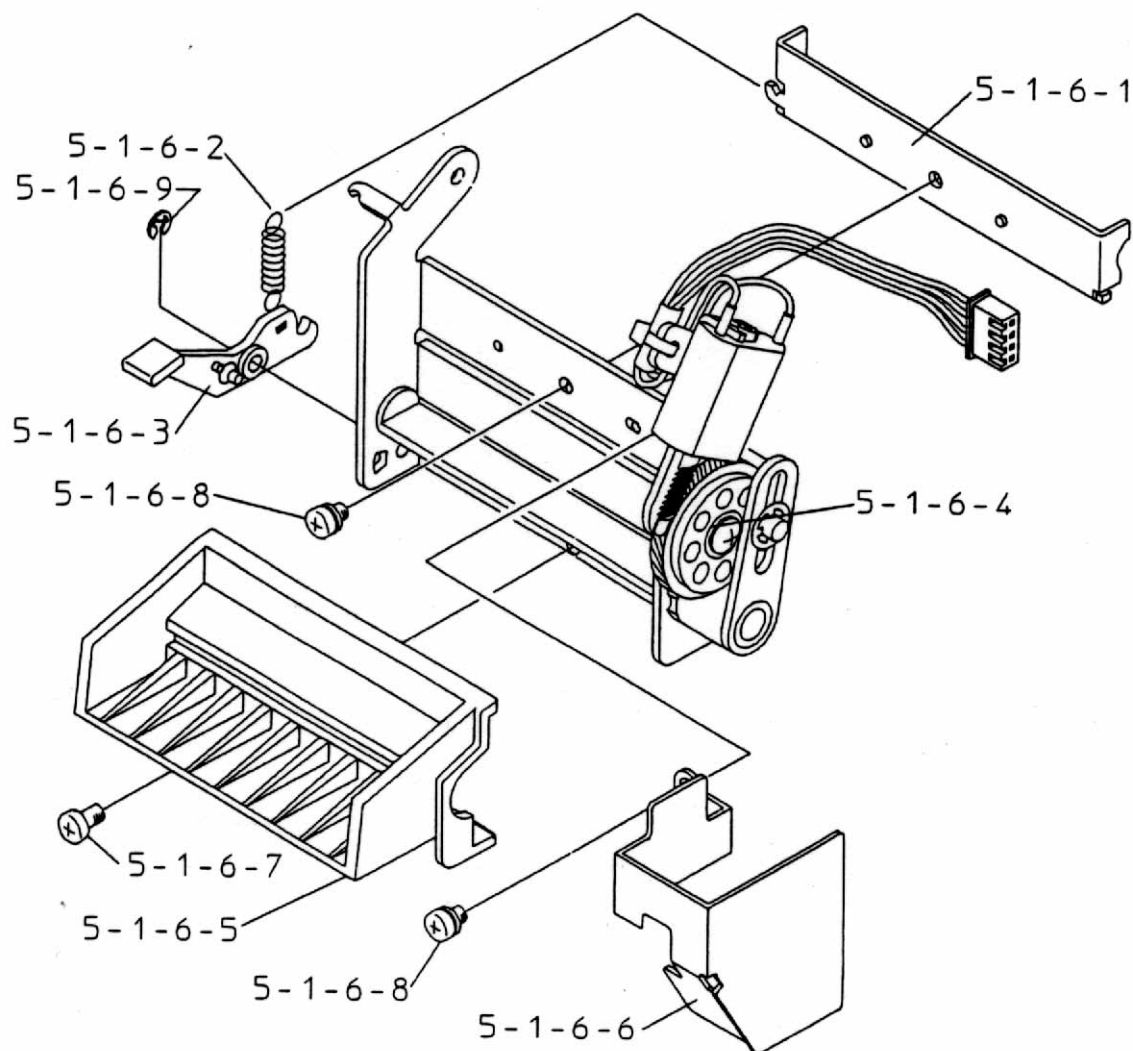Disassembly Diagram 7

PART LIST for Disassemble Diagram 1

CBM-253-RF120

Ref. No.	Parts No.	Description	Qty
1	E62010680	Upper Case(Top Case) Assy	1
2	E62040190	Printer Cover Assy	1
3	E62020150	Back Hatch	1
4	E4002-46(8)0	Chassis Assy *	1
5	E8010-210	Frame Assy	1
6	E70010730	PCB Assy CBM-253-RF120	1
7	E4002-470	Shield Plate	1
8	E4035-750	Insulation Sheet	1
9	E6100-710	Power Cable(AC Cord) for 120V	1
10	E4900-200	Wiring Harness(Harness)	1
11	E8035-010	Cable Binder	1
12		Warning Label	1
13	90000300	Screw P/H Tapping STP3X 8	1
14	90000540	Screw P/H Tapping BTP3X12	4
15	90001360	Screw P/H Tapping STP3X8 Sems	5
16	90100280	Screw P/H SMP3X4	1
17	E6101-140	Spacer	1

PART LIST for Disassemble Diagram 1

CBM-253-RF230

Ref. No.	Parts No.	Parts Name	Qty
1	E62010750	Upper Case(Top Case) Assy for CE only	1
2	E62040190	Printer Cover Assy	1
3	E62020150	Back Hatch	1
4	E4002-460	Chassis Assy *	1
5	E8010-210	Frame Assy	1
6	E70010750	PCB Assy CBM-253-RF230	1
7	E4002-470	Shield Plate	1
8	E4035-750	Insulation Sheet	1
9	E6100-710	Power Cable(AC Cord) for 230V	1
10	E4900-200	Wiring Harness(Harness)	1
11	E8035-010	Cable Binder	1
12		Warning Label	1
13	90000300	Screw P/H Tapping STP3X 8	1
14	90000540	Screw P/H Tapping BTP3X12	4
15	90001360	Screw P/H Tapping STP3X8 Sems	5
16	90100280	Screw P/H SMP3X4	1
17	E6101-140	Spacer	1

PART LIST for Disassemble Diagram 1

CBM-253-PF120

Ref. No.	Parts No.	Parts Name	Qty
1	E62010680	Upper Case(Top Case) Assembly	1
2	E62040190	Printer Cover Assy	1
3	E62020150	Back Hatch	1
4	E4002-460	Chassis Assy *	1
5	E8010-210	Frame Assy	1
6	E70010740	PCB Assy CBM-253-PF120	1
7	E4002-470	Shield Plate	1
8	E4035-750	Insulation Sheet	1
9	E6100-710	Power Cable(AC Cord) for 120V	1
10	E4900-200	Wiring Harness(Harness)	1
11	E8035-010	Cable Binder	1
12		Warning Label	1
13	90000300	Screw P/H Tapping STP3X 8	1
14	90000540	Screw P/H Tapping BTP3X12	4
15	90001360	Screw P/H Tapping STP3X8 Sems	5
16	90100280	Screw P/H SMP3X4	1
17	E6101-140	Spacer	1

PART LIST for Disassemble Diagram 1

CBM-253-PF230

Ref. No.	Parts No.	Parts Name	Qty
1	E62010750	Upper Case(Top Case) Assy for CE only	1
2	E62040190	Printer Cover Assy	1
3	E62020150	Back Hatch	1
4	E4002-460	Chassis Assy *	1
5	E8010-210	Frame Assy	1
6	E70010760	PCB Assy CBM-253-PF230	1
7	E4002-470	Shield Plate	1
8	E4035-750	Insulating Sheet	1
9	E6100-710	Power Cable(AC Cord) for 230V	1
10	E4900-200	Wiring Harness(Harness)	1
11	E8035-010	Cable Binder	1
12		Warning Label	1
13	90000300	Screw P/H Tapping STP3X 8	1
14	90000540	Screw P/H Tapping BTP3X12	4
15	90001360	Screw P/H Tapping STP3X8 Sems	5
16	90100280	Screw P/H SMP3X4	1
17	E6101-140	Spacer	1

PART LIST for Disassembly Diagram 3(Upper Case Assembly)

CBM-253-RF120 / CBM-253-PF120

Ref. No.	Parts No.	Parts Name	Qty
1-1	E62010685	Upper Case(Top Case)	1
1-2	E5200-230	Operation Panel Sheet(OP Sheet)	1
1-3	E40000010	Near End Sensor Assy	1
1-4	E40000030	Printer Cover (Open) Sensor Assy	1
1-5	E40000020	Operation Panel(OP) PCB Assembly	1
1-6	90000120	Screw P/H Tapping BTP3X8	2
1-7	90000540	Screw P/H Tapping BTP3X12	1

PARTS LIST for Disassembly Diagram 3(Upper Case Assembly)

CBM-253-RF230 / CBM-253-PF230

Ref. No.	Parts No.	Parts Name	Qty
1-1	E62010685	Upper Case(Top Case)	1
1-2	E5200-230	Operation Panel Sheet(OP Sheet)	1
1-3	E40000010	Near End Sensor Assy	1
1-4	E40000030	Printer Cover (Open) Sensor Assy	1
1-5	E40000130	Operation Panel(OP) PCB Assembly for CE only	1
1-6	90000120	Screw P/H Tapping BTP3X8	2
1-7	90000540	Screw P/H Tapping BTP3X12	1

PART LIST for Disassemble Diagram 2

Ref. No.	Parts No.	Parts Name	Qty
2-1		Printer Cover	1
2-2		Operation Label	1

PART LIST for Disassemble Diagram 4(Chassis Assembly)

Ref. No.	Parts No.	Description	Qty
4	E4002-480	Chassis Assey	1
4-1	E6302-350	Rubber Foot	4
4-2	E4002-510	Chassis	1
4-3		Mode Label	1

PART LIST for Disassemble Diagram 5(Frame Assembly)

Ref. No.	Parts No.	Description	Qty
5-1		Printer Mechanism	1
5-2	E6601-300	Frame	1
5-3	E4035-740	Grounding Wire(Ground Wire)	1
5-4	90100280	Screw P/H SMP3X4	5

PART LIST for Disassemble Diagram 6(Printer Mechanism)

Ref. No.	Parts No.	Description	Qty
5-1-1	E8004-080	Cutter Bracket-L	1
5-1-2	E8004-090	Cutter Bracket-R	1
5-1-3	E8021-060	Coil Spring	1
5-1-4	LT280	Printer Mechanism AssyLT-280	1
5-1-5	E8024-100	Shaft	1
5-1-6	AC7	Auto Cutter Assy AC-7	1
5-1-7	E8035-010	Cable Binder	2
5-1-8		Warning Label	1
5-1-9		Warning Label	1
5-1-10	90100780	Screw P/H SMP3X4 Sems A	2
5-1-11	E2	E Ring E2	2

PART LIST for Disassemble Diagram 7(Auto Cutter Assy)

Ref. No.	Parts No.	Description	Qty
5-1-6-1	E8026-060	Cutter Holder	1
5-1-6-2	E8021-100	Coil Spring	1
5-1-6-3	E8032-090	Cutter Lever	1
5-1-6-4	YZ38288	Auto Cutter Unit	1
5-1-6-5	E8023-050	Cutter Cover	1
5-1-6-6	E8005-010	Gear Cover	1
5-1-6-7	90100020	Screw P/H SMP3X6	1
5-1-6-8	90100780	Screw P/H SMP3X4 Sems A	2
5-1-6-9	E2	E Ring E2	1

PART LIST for Disassemble Diagram 8(Printer Mechanism Assy)

Ref. No.	Parts No.	Description	Qty
5-1-4-1	E8029-010	Knob	1
5-1-4-2	E8029-020	Knob	1
5-1-4-3	E8009-010	Sensor Holder	1
5-1-4-4	E8021-070	Coil Spring	1
5-1-4-5	E8021-100	Coil Spring	1
5-1-4-6	E8021-080	Plate Spring(Roller Holder)	1
5-1-4-7	E8021-090	Coil Spring	1
5-1-4-8	E8024-050	Shaft	1
5-1-4-9	E8024-080	Shaft	1
5-1-4-10	E8024-090	Shaft	1
5-1-4-11	E8032-040	Arm	1
5-1-4-12	E8032-080	Arm	1
5-1-4-13	E8011-040	Paper Guide Chassis Assy	1
5-1-4-14	E8010-220	Motor bracket Assy	1
5-1-4-15	E8010-230	Frame Assy	1
5-1-4-16	E8013-030	Lever Assy	1
5-1-4-17	E8002-030	Frame	1
5-1-4-18	E8002-040	Head Frame	1
5-1-4-19	E8019-020	Gear	1
5-1-4-20	E8019-030	Gear	1
5-1-4-21	E8019-060	Gear	1
5-1-4-22	E8019-070	Roller Gear	1
5-1-4-23	J0568S518	Thermal Print Head	1
5-1-4-24	E8025-020	Bearing(Bush)	3
5-1-4-25	E8022-030	Paper Guide	1
5-1-4-26	E8031-030	Platen Roller(Platen)	1
5-1-4-27	E8031-050	Roller	1
5-1-4-28	E8031-060	Roller	1
5-1-4-29	E8025-040	Spacer	1
5-1-4-30	E8017-040	Stepping Motor PM35S048-ZZB4	1
5-1-4-31	E8018-070	Sensor Assy	1
5-1-4-32	E8035-010	Cable Binder	1
5-1-4-33	90000050	Screw P/H Tapping BTP2.6X6	1
5-1-4-34	90000120	Screw P/H Tapping BTP3X8	1
5-1-4-35	90000150	Screw P/H Tapping BTP3X6	1
5-1-4-36	90000170	Screw P/H Tapping BTP2X4	1
5-1-4-37	90000830	Screw P/H Tapping BTP2X12	2
5-1-4-38	90001110	Screw P/H Tapping BTP3X5	1
5-1-4-39	90100020	Screw P/H SMP3X6	1
5-1-4-40	90100290	Screw P/H SMP3X3	3
5-1-4-41	90200080	Screw F/H SMF3X14	2
5-1-4-42	90200090	Screw F/H SMF3X8Ni	2
5-1-4-43	E2.5	E Ring E2.5	1
5-1-4-44	E4	E Ring E4	4
5-1-4-45	E2	E Ring E2	6