

Chapter 5 Parts List

MLT-288

Ref. No.	Parts No.	Description	Q' ty		Remarks
			-A	-B	
1	100091-00	FRAME ASSY	1		
2	600300-00	FRAME		1	
4	500277-00	CHASSIS	1	1	
5	800396-00	PLATEN	1	1	
6	600301-00	HEADUP LEVER	1	1	
7	600302-00	REDUCTION GEAR 1	1	1	
8	600303-00	REDUCTION GEAR 2	1	1	
9	600304-00	REDUCTION GEAR 3	1	1	
10	600305-00	PLATEN GEAR	1	1	
11	500278-00	HEAD SP	1	1	
12	100092-00	HEAD ASSY	1	1	
16	200001-00	MOTOR ASSY	1	1	
20	200002-00	PE SENSOR ASSY	1	1	
23	200003-00	HEADUP SW ASSY	1	1	
25	H560001-10	CABLE TIE(T18S)	1	1	
26					
27					
28					
29					
30					
31	F16417-035	SCREW,No.0,PHT(BT#1),(GUIDELESS),M1.7x3.5	5	5	
32	F01817-03	SCREW,No.0,PH(#1), M1.7x3	1	1	
33	F01917-08	SCREW,No.0,PH(#1), M1.7x8	1	1	
34	F15917-02	SCREW,No.0,PHT(ST#1), M1.7x2	2	2	
36	F60120-00	E-RING No.2	1	1	
37					
38					
39					

Chapter 6 Disassemble Drawing

MLT-288 disassemble drawing

