

Chapter 5 Parts List

MLT-289

Ref. No.	Parts No.	Description	Q' ty		Remarks
			Standard		
1	600324-00	FRAME	1		
2	100093-00	PLATEN ASSY	1		
3	800421-00	PLATEN	1		
4	600326-00	PLATEN BUSH L	1		
5	600325-00	PLATEN BUSH R	1		
6	600327-00	PLATEN GEAR	1		
7	600336-00	PLATEN HOLDER	1		
8	600328-00	PLATEN LEVER	1		
9	600329-00	REDUCTION GEAR 1	1		
10	600330-00	REDUCTION GEAR 2	1		
11	600331-00	REDUCTION GEAR 3	1		
12	600332-00	IDLE GEAR	1		
13	700018-00	HEAD SP	2		
14	100094-00	HEAD ASSY	1		
19	550039-00	HEAD SHAFT	1		
20	200011-00	MOTOR ASSY	1		
24	200013-00	PE SENSOR ASSY 289	1		
27	200012-10	PLATEN SENSOR ASSY	1		
29	500293-00	GROUND PLATE	1		
30	H560001-10	CABLE TIE (T18S)	1		
31	600333-00	GEAR COVER	1		
33	F01817-03	SCREW, No.0, PH (#1), M1.7 x 3	2		
34	F13417-06	SCREW, No.0, PHT (BT#1), M1.7 x 6	1		
35	F15917-02	SCREW, No.0, PHT (ST#1), M1.7 x 2	1		
36	F16917-055	SCREW, No.0, SHT (BTø4 x 0.5), M1.7 x 5.5	1		
37	F16823-04	SCREW, PHT (ST#1), M2.3 x 4	1		

Chapter 6 Disassemble Drawing

MLT-289 disassemble drawing

