

PARTS LIST
EXPLODED VIEW

iDP3540 / 3541-PF / RF / XF

Symbol	Parts No.	Description	Q'ty	iDP3540	iDP3541
1	E 4002-370	Chassis	1	<-	<-
2	E 4002-320	Stand, Transformer	1	<-	<-
3	E 6601-220	Printer Support	2	<-	<-
4	E 4035-640	Plate, Ground	1	<-	<-
7	E 4000-840	P.S. Assy 120V Only	<1>		
	E 4000-830	P.S. Assy 220-240V Only	<1>		
13	E 4002-310	Plate, Shield	1	<-	<-
14		Main Control Board Unit	<1>		
17	E 5117-020	Holder, PE Switch	1	<-	<-
18	E 5102-440	Assy, PE Switch	1	<-	<-
18-1	E 5071-070	Key Top, PE Switch	1	<-	<-
-2	E 5102-440	Key Switch SKCCAD	1	<-	<-
-3	E 48000300	Harness, PE Sensor	1		
20	E 62010360	Case, Top	1	<-	<-
21	E 5200-100	OP Sheet	1	<-	<-
24-1	E 6202-870	Case, Bottom	1	<-	<-
-2	E 6611-330	Holder, Paper	1	<-	<-
-3	E 6612-040	Spring, Paper Holder	1	<-	<-
-4	E 6302-240	Foot	2	<-	<-
32	E 6204-730	Printer Cover	1	<-	
33	E 6220-130	Paper Cutter	1	<-	
34	E 6204-800	Printer Cover	1		<-
40	E 6101-120	Cord Bush SR5N4 120V Only	1	<-	<-
	E 6101-115	Cord Bush SR5N4 220-240V Only	1	<-	<-
43	E 6600-880	Printer DP-610MFC	<1>		
	E 6600-890	Printer DP-612MFC	<1>		
	E 6600-900	Printer DP-614MFC	<1>		


PARTS LIST

EXPLODED VIEW


iDP3540 / 3541-PF / RF / XF

Symbol	Parts No.	Description Q'ty			iDP3540	iDP3541
	E 6600-	Printer	DP-610DFC	<1>		
	E 6600-	Printer	DP-612DFC	<1>		
	E 6600-	Printer	DP-614DFC	<1>		
	E 6600-	Printer	DP-610MPC	<1>		
	E 6600-	Printer	DP-612MPC	<1>		
	E 6600-	Printer	DP-614MPC	<1>		
	E 6600-	Printer	DP-610DPC	<1>		
	E 6600-	Printer	DP-612DPC	<1>		
	E 6600-	Printer	DP-614DPC	<1>		
44	T 6192-01*	Knob		1	<-	<-
45	E 6310-010	Rear Cover		1	<-	<-
48	AC-2	Auto Cutter		1		<-
66	ST1P 3×6	Screw	M3 × 6	3	<-	<-
67	BT1P 3×8	Screw	M3 × 8		<-	<-
68	ST1N3×14-8	Screw	M3 × 14 D = 8	2	<-	<-
69	ST1P 4×20	Screw	M4 × 20	2	<-	<-
70	SMP 4×6	Screw	M4 × 6 TW Sems	2	<-	<-
71	BT1P 3×14	Screw	M3 × 14		<-	<-
72	STP 3×12	Screw	M3 × 12	2	<-	<-
74	SMP 3×8	Screw	M3 × 8	1	<-	<-

iDP-3540/3541 (1)

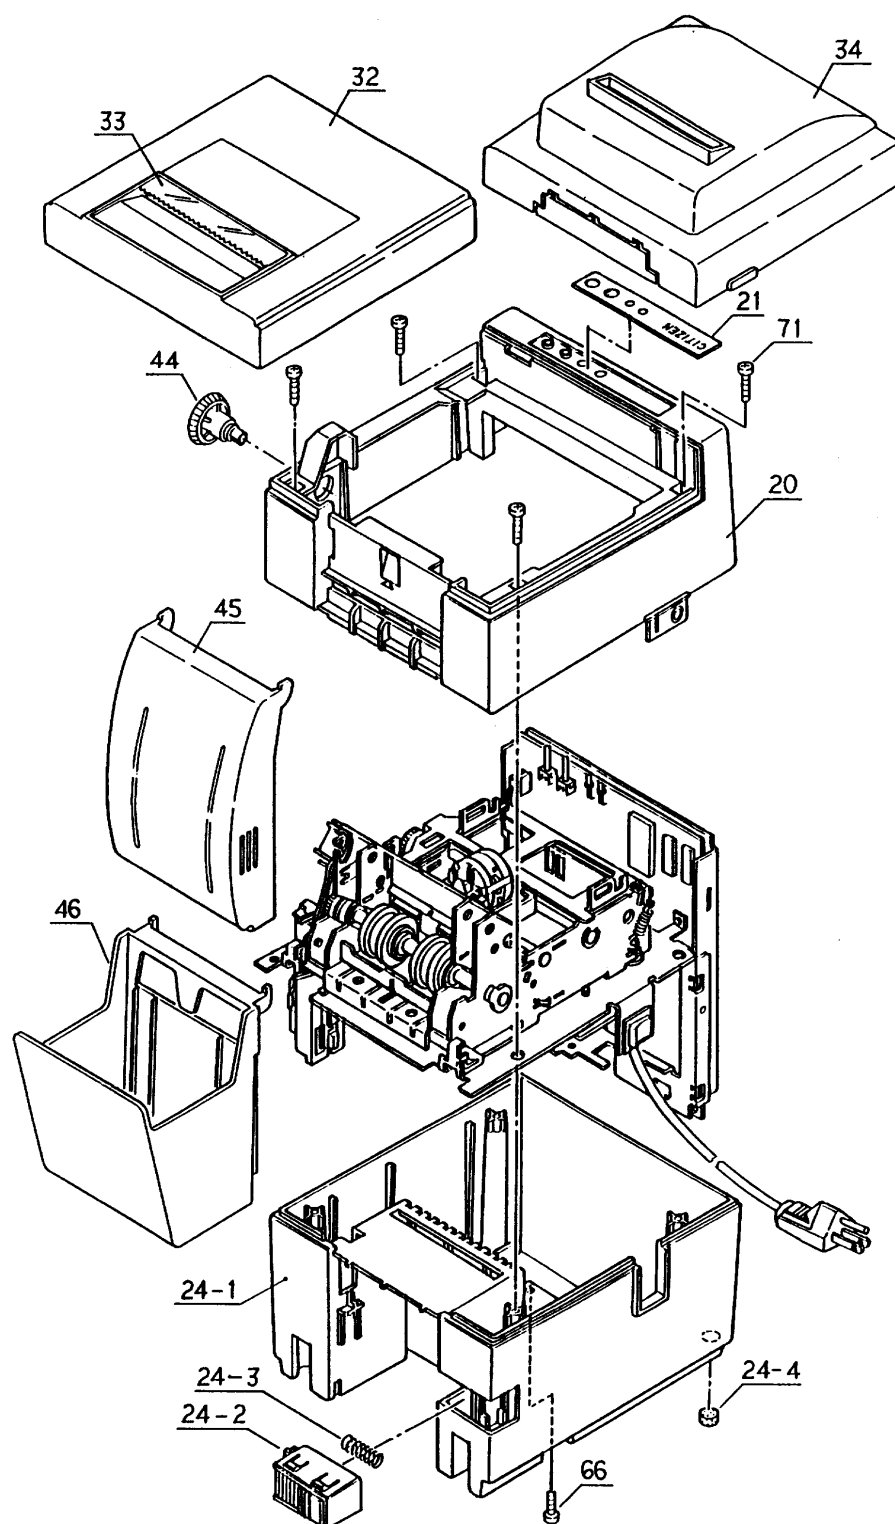

iDP-3540/3541 (2)

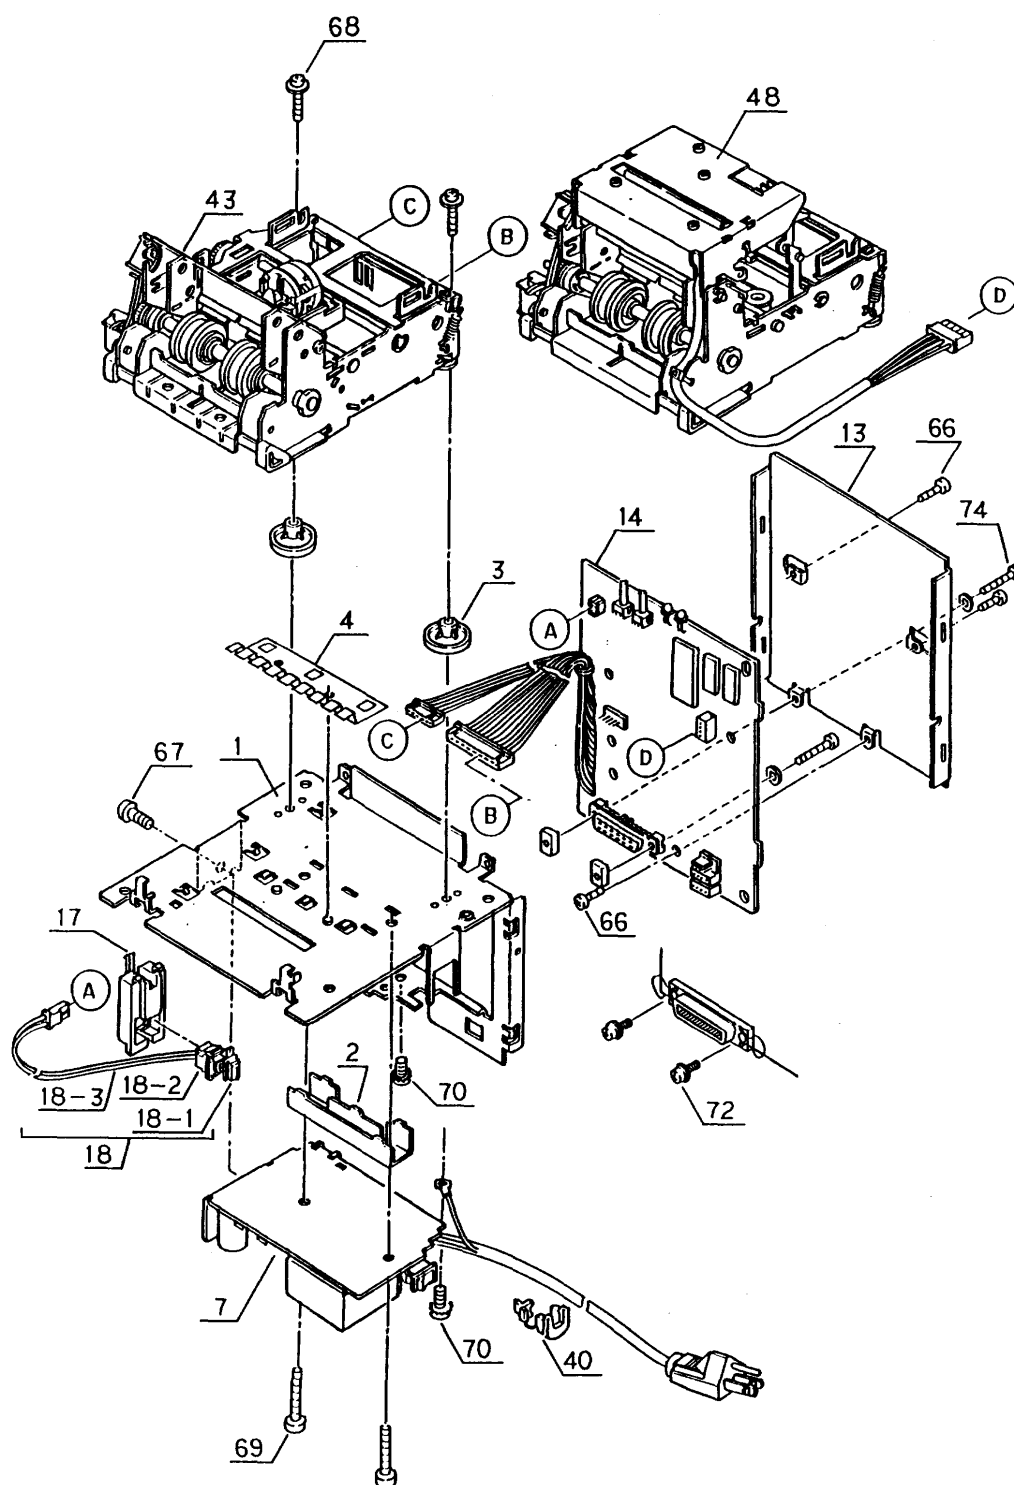

PARTS LIST

POWER SUPPLY UNIT

iDP3540 / 3541-PF / RF / XF


Symbol	Parts No.	Description	Q'ty	120V	220-240V
	1	PC Board			
	2	E 4006-220 Fuse Holder UF-0033#01	4	<-	<-
F 1, 3	E 4005-475	Fuse 5MF1	2	<-	
	1	E 4005-470 Fuse EAWK 500mA	1		<-
	3	E 4005-550 Fuse EAK-1A	1		<-
	3	E 4010-370 Heatsink	1	<-	<-
CN	1	E 48000335 Connector F5P-SHVQ	1	<-	<-
	5	E 4014-230 Terminal GSK801 / 2-bDS	1		<-
S	1	E 4003-540 Power Switch T883S1BBR1-U	1	<-	<-
	4	E 40190150 Insulation Sheet 2076A-5051	1	<-	<-
IC	1	E 390-150 Regulator M5231TL	1	<-	<-
	2	E 390-160 Regulator uPC2405HF	1	<-	<-
DS	1	E 450-320 Re. Diode 2KBP02	1	<-	<-
	2	E 450-330 Re. Diode KBP02	1	<-	<-
TR	1	E 324-010 Transistor 2SB974L	1	<-	<-
C	1, 2	E 2310-010 F. Cap. CFX22E104M	2	<-	<-
	5	E 2022-790 El. Cap. 63PN-G2200A	1	<-	<-
	6	E 2110-820 C. Cap. DD003-298b101K50	1	<-	<-
	7	E 2010-080 El. Cap. 1uF / 50	1	<-	<-
	8	E 2047-730 El. Cap. 470uF / 35	1	<-	<-
	9	E 2033-740 El. Cap. 3300uF / 16	1	<-	<-
	10	E 2010-725 El. Cap. 100uF / 25	1		<-
	11	E 2310-210 My. Cap. DYM21H104K	1	<-	<-

PARTS LIST

POWER SUPPLY UNIT

iDP3540 / 3541-PF / RF / XF


Symbol	Parts No.	Description	Q'ty	120V	220-240V
R	1 E 3331-041	Resistor 1 / 4W 330 J	1	<-	<-
	2 E 3561-041	Resistor 1 / 4W 560 J	1	<-	<-
	3 E 3223-100	Resistor RN14S 20K F	1	<-	<-
	4 E 3152-030	Resistor RN14S 1.54K F	1	<-	<-
	5 E 6100-585	Power Cord 25-0185	1		<-
	E 6100-580	Power Cord 25-0184	1	<-	
	7 E 4001-815	Power Trans. 25-0175 (50 / 60Hz)	1		<-
	E 4001-810	Power Trans. 25-0174 (50 / 60Hz)	1	<-	
NF	E 4009-340	Noise Filter SU10V-100CC30	1	<-	<-
	8 BT1P 3 × 8	Screw M3 × 8	3	<-	<-

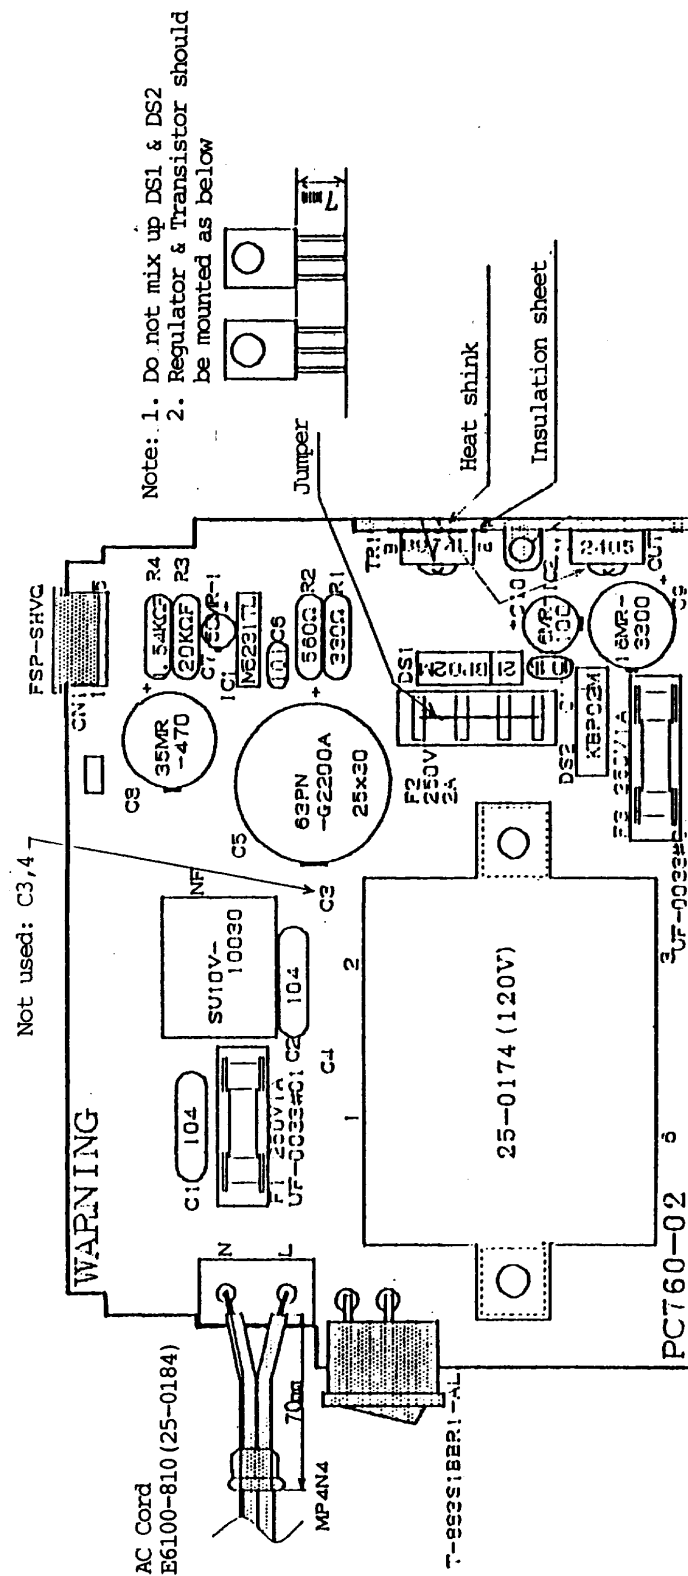

TREATMENT	MATERIAL		t =				
			φ =				
TOLERANCE DIMENSION	MODEL	QTY	TITLE PARTS POSITION POWER SUPPLY UNIT FOR 120V				
	ANGLE						
SCALE, UNIT	APPROVED	CHECKED	DESIGNED	DRAWN	PARTS No. 90-0143		
	inch						

Japan CBM Corporation

THIRD ANGLE

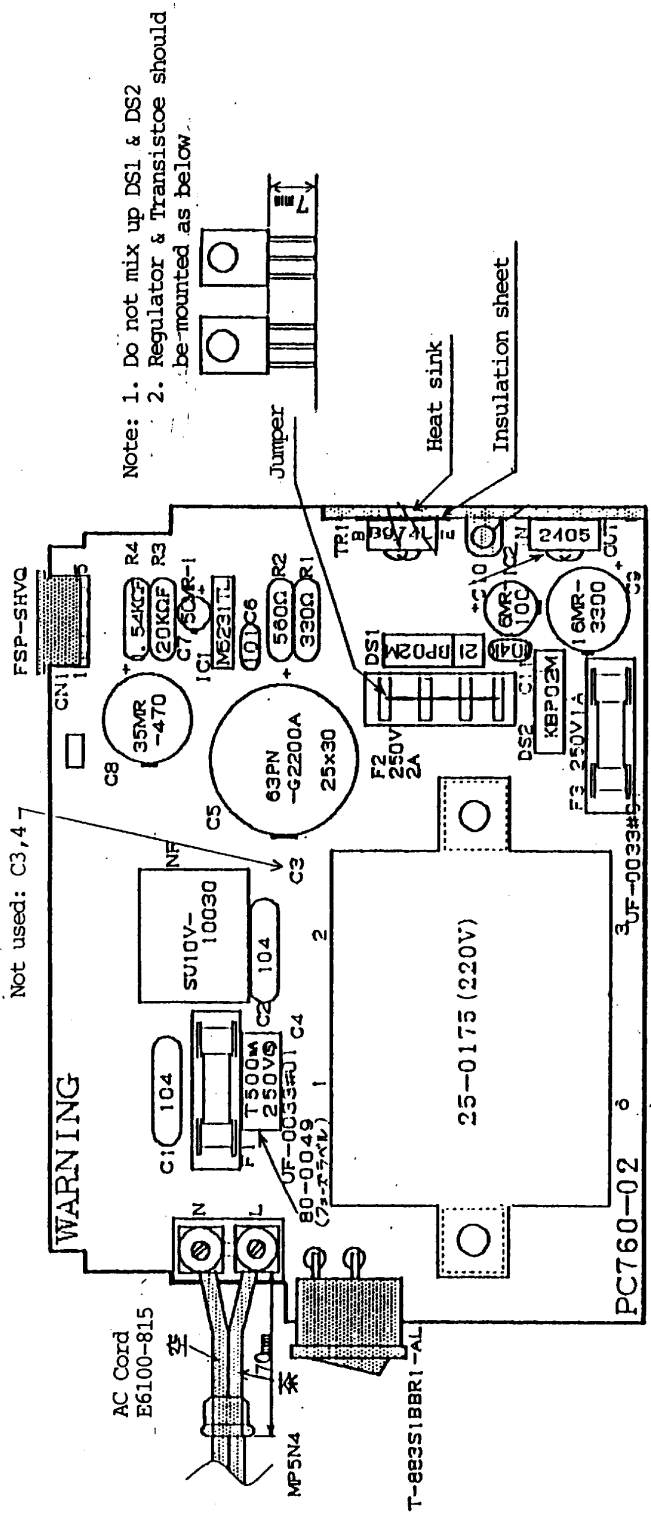

TREATMENT	MATERIAL	φ	φ	MARK	DATE	REVISION	REV. No.
TOLERANCE	MODEL	QTY	QTY	TITLE	PARTS POSITION	UNIT FOR 220V	
DIMENSION	ANGLE	DESIGNED	DRAWN	PARTS No.	90-0144		
SCALE	UNIT	APPROVED	CHECKED	DESIGNED	DRAWN		
	inch						
	mm						

Japan CBM Corporation

THIRD ANGLE

PARTS LIST

MAIN CONTROL BOARD UNIT

iDP3540-PF / RF / XF

Symbol	Parts No.	Description	Q'ty	iDP3540 -PF	iDP3540 -RF	iDP3540 -XF
1		PC Board		<-	<-	
	E 4002-360	Blind Plate	1			<-
2	E 4010-360	Heatsink	1	<-	<-	
		PC Board				<-
3	E 48000285	D-Sub Connector Holder FCN-770A68	1		<-	
	E 9901-010	IC Socket DILB28P-8J	1	<-		
	E 4010-360	Heatsink	1			<-
4	E 9901-010	IC Socket DILB28P-8J	1		<-	
	E 4002-350	Shield Plate	1	<-		
	E 48000285	D-Sub Connector Holder FCN-770A68	1			<-
5	E 4002-350	Shield Plate	1		<-	
	E 48000335	Cord Assy MMH5395-26-170-17	1	<-		
	E 9901-010	IC Socket DILB28P-8J	1			<-
6	E 48000335	Cord Assy MMH5395-26-170-17	1		<-	
	E 48000340	Cord Assy MMH5395-26-170-7	1	<-		
	E 4002-350	Shield Plate	1			<-
7	E 48000340	Cord Assy MMH5395-26-170-7	1		<-	
	E 4013-100	Cable Binder SKB-80	1	<-		
	E 48000335	Cord Assy MMH5395-26-170-17	1			<-
8	E 4013-100	Cable Binder SKB-80	1		<-	
	ST1P 3 × 12	Screw M3 × 12	2	<-		
	E 48000340	Cord Assy MMH5395-26-170-7	1			<-
9	ST1P 3 × 6	Screw M3 × 6	1		<-	
	SMP 3 × 8	Screw M3 × 8	2	<-		
	E 4013-100	Cable Binder SKB-80	1			<-
10	SMP 3 × 8	Screw M3 × 8	2	<-	<-	
	ST1P 3 × 6	Screw M3 × 6	2			<-
11	N 3-1	Nut M3	2	<-	<-	
	SMP 3 × 8	Screw M3 × 8	2			<-
12	N 3-1	Nut M3	2			<-

PARTS LIST

MAIN CONTROL BOARD UNIT

iDP3540-PF / RF / XF

Symbol	Parts No.	Description	Q'ty	iDP3540	iDP3540	iDP3540
				-PF	-RF	-XF
X 2	E 501-150	X'tal SA7.37MT40	1	<-	<-	<-
CN 1	E 48000260	Connector B5P-SHF-1	1	<-	<-	<-
	E 4800-690	Connector 5267-02A	1	<-	<-	<-
	3, 6, 7	E 48000265 Connector 5054-04A	3	<-	<-	<-
	4	E 48000270 Connector	1	<-		
		FCN-684J036-L / U				
8	E 48000280	D-Sub Connector	1		<-	
		FCN-674J025-L / C				
	E 48000285	D-Sub Connenyot Holder	1			<-
		FCN-770A68				
BZ	E 7151-120	Buzzer MEB-12-5	1	<-	<-	<-
S 1, 2	E 5102-450	Key Switch SKHHNH	2	<-	<-	<-
	3	E 5104-340 Slide Switch MMS-A-2-2N	1		<-	<-
DS 1	E 5103-400	Dip Switch SCS-08A	1	<-		
	1, 2	E 5103-400 Dip Switch SCS-08A	2		<-	<-
IC 1	E 104-200	LSI M50734SP	1	<-	<-	<-
	2	E 104-340 LSI 27C128-20J	1	<-	<-	<-
	3	E 104-330 LSI MB8464A-15LP	1	<-	<-	<-
	4	E 201-811 TTL HD74LS373P	1	<-	<-	<-
	5, 14	E 201-821 TTL HD74LS240P	2	<-		
	5	E 201-821 TTL HD74LS240P	1		<-	<-
	6	E 2010231 TTL HD74LS375P	1	<-	<-	<-
	7	E 201-831 TTL HD74LS139P	1	<-	<-	<-
	8, 9	E 201-611 TTL HD74LS04P	2	<-	<-	<-
	10	E 201-720 TTL HD74LS27P	1	<-	<-	<-
	11	E 202-610 IC UPC393C	1	<-	<-	<-
	12, 13	E 201-611 TTL HD7406P	2	<-		
	12	E 2010201 TTL HD7406P	1		<-	<-
	13, 14	E 2010040 IC MAX232CPE	2		<-	<-
	13	E 202-720 IC SN751177BP	1			

PARTS LIST

MAIN CONTROL BOARD UNIT

iDP3540-PF / RF / XF

Symbol	Parts No.	Description	Q'ty	iDP3540 -PF	iDP3540 -RF	iDP3540 -XF
ZD 1	E 403-061	Zener Diode RD3.OEL1	1	<-	<-	<-
D 5, 7	E 400-041	Diode 1S2076	3		<-	
LED1, 2	E 480-290	LED SEL2310G	2	<-	<-	<-
TR 1	E 319-117	Transistor 2SA1175 (HF)	1	<-	<-	<-
2-4	E 359-040	Transistor KSC945C (Y)	4	<-		<-
13						
2-4	E 359-040	Transistor KSC945C (Y)	6		<-	
13-15						
TA 1	E 390-100	Tr. Array HA13408	1	<-	<-	<-
2, 3	E 390-140	Tr. Array STA301A	2	<-	<-	<-
P 1	E 391-080	Photo Coupler PC837	1		<-	
C 1	E 2001-650	El. Cap. 1uF / 50	1	<-	<-	<-
2	E 2310-220	My. Cap. DMY21H473K	1	<-	<-	<-
3	E 2047-300	El. Cap. FS0H4732	1	<-	<-	<-
4, 5, 27	E 2147-090	C. Cap. DD003-298B471K50	3	<-		
4, 5	E 2147-090	C. Cap. DD003-298B471K50	2		<-	<-
6, 7	E 2110-800	C. Cap. DD107RH101J50	2	<-	<-	<-
8, 9, 11	E 2110-810	C. Cap. DD003-298B102K50	5	<-		<-
12, 15						
8, 9, 11	E 2110-810	C. Cap. DD003-298B102K50	6		<-	
12, 15						
34						
10, 14	E 2110-815	C. Cap. DD003-298F103Z50	2	<-	<-	<-
16	E 2110-805	C. Cap. DD306-979F104Z25	9	<-		
19-26						
16	E 2110-805	C. Cap. DD306-979F104Z25	8		<-	
19-25						

PARTS LIST

MAIN CONTROL BOARD UNIT

iDP3540-PF / RF / XF

Symbol	Parts No.	Description	Q'ty	iDP3540 -PF	iDP3540 -RF	iDP3540 -XF
C 16	E 2110-805	C. Cap. DD306-979F104Z25	9			<-
19-25						
28						
17	E 2010-725	El. Cap. 100uF / 25	1	<-	<-	<-
18	E 2047-630	El. Cap. 47uF / 35	1	<-	<-	<-
26	E 2010-650	El. Cap. 10uF / 50	1		<-	
26, 27	E 2110-820	C. Cap. DD306-298B101K50	2			<-
27, 28	E 2047-620	El. Cap. 47uF / 25	2		<-	
28	E 2122-030	C. Cap. DD306-298B101K50	1	<-		
29-32	E 2022-650	El. Cap. 22uF / 50	4		<-	
33	E 2122-030	C. Cap. DD306-298B101K50	1		<-	
R 1	E 3152-120	Me. Re. RN14S 1.5K F	1	<-	<-	<-
2	E 3272-100	Me. Re. RN14S 2.7K F	1	<-	<-	<-
3, 33	E 3102-041	Re. 1 / 4W 1 K J	3	<-		<-
35						
3, 33	E 3102-041	Re. 1 / 4W 1 K J	4		<-	
35, 41						
4	E 3222-041	Re. 1 / 4W 2.2K J	1	<-	<-	<-
5, 7, 14	E 3332-041	Re. 1 / 4W 3.3K J	7	<-		
15, 34						
36, 37						
5, 7, 14	E 3332-041	Re. 1 / 4W 3.3K J	8		<-	
15, 34						
36, 37						
39						
5, 7, 14	E 3332-041	Re. 1 / 4W 3.3K J	9			<-
15, 34						
36, 37						
38, 39						
6	E 3473-041	Re. 1 / 4W 47 K J	1	<-	<-	
6	E 3473-041	Re. 1 / 4W 47 K J	3			<-
44, 45						
8, 13	E 3101-041	Re. 1 / 4W 100 J	2	<-		<-
8, 13	E 3101-041	Re. 1 / 4W 100 J	4		<-	
42, 43						
9, 11	E 3103-041	Re. 1 / 4W 10 K J	2	<-	<-	<-
10	E 3623-041	Re. 1 / 4W 62 K J	1	<-	<-	<-

PARTS LIST


MAIN CONTROL BOARD UNIT

iDP3540-PF / RF / XF

Symbol	Parts No.	Description	Q'ty	iDP3540 -PF	iDP3540 -RF	iDP3540 -XF
R 12	E 3105-041	Re. 1 / 4W 1 M J	1	<-	<-	<-
16, 17	E 3331-041	Re. 1 / 4W 330 J	2	<-	<-	<-
18	E 3152-020	Me. Re. RSMF 1B 1.5 J	1	<-	<-	<-
38, 40	E 3221-041	Re. 1 / 4W 220 J	2		<-	
40, 41	E 3100-041	Re. 1 / 4W 10 J	2			<-
42, 43	E 3472-041	Re. 1 / 4W 4.7K J	2			<-
RA 1	E 3103-130	Re. Array RGLD 8 × 103J	1	<-		
1, 5	E 3103-130	Re. Array RGLD 8 × 103J	2		<-	<-
2	E 3103-180	Re. Array RGLD 12 × 103J	1	<-	<-	<-
3, 7	E 3101-120	Re. Array RGLD 3Y102J	2	<-	<-	<-
4	E 3101-130	Re. Array RGLD 6 × 102J	1	<-	<-	<-
5	E 3103-190	Re. Array RGLD 6 × 103J	1	<-		
6, 8	E 3322-070	Re. Array RGLD 8 × 332J	2	<-		
6	E 3322-070	Re. Array RGLD 8 × 332J	1		<-	


iDP3540

Parallel Control PCB

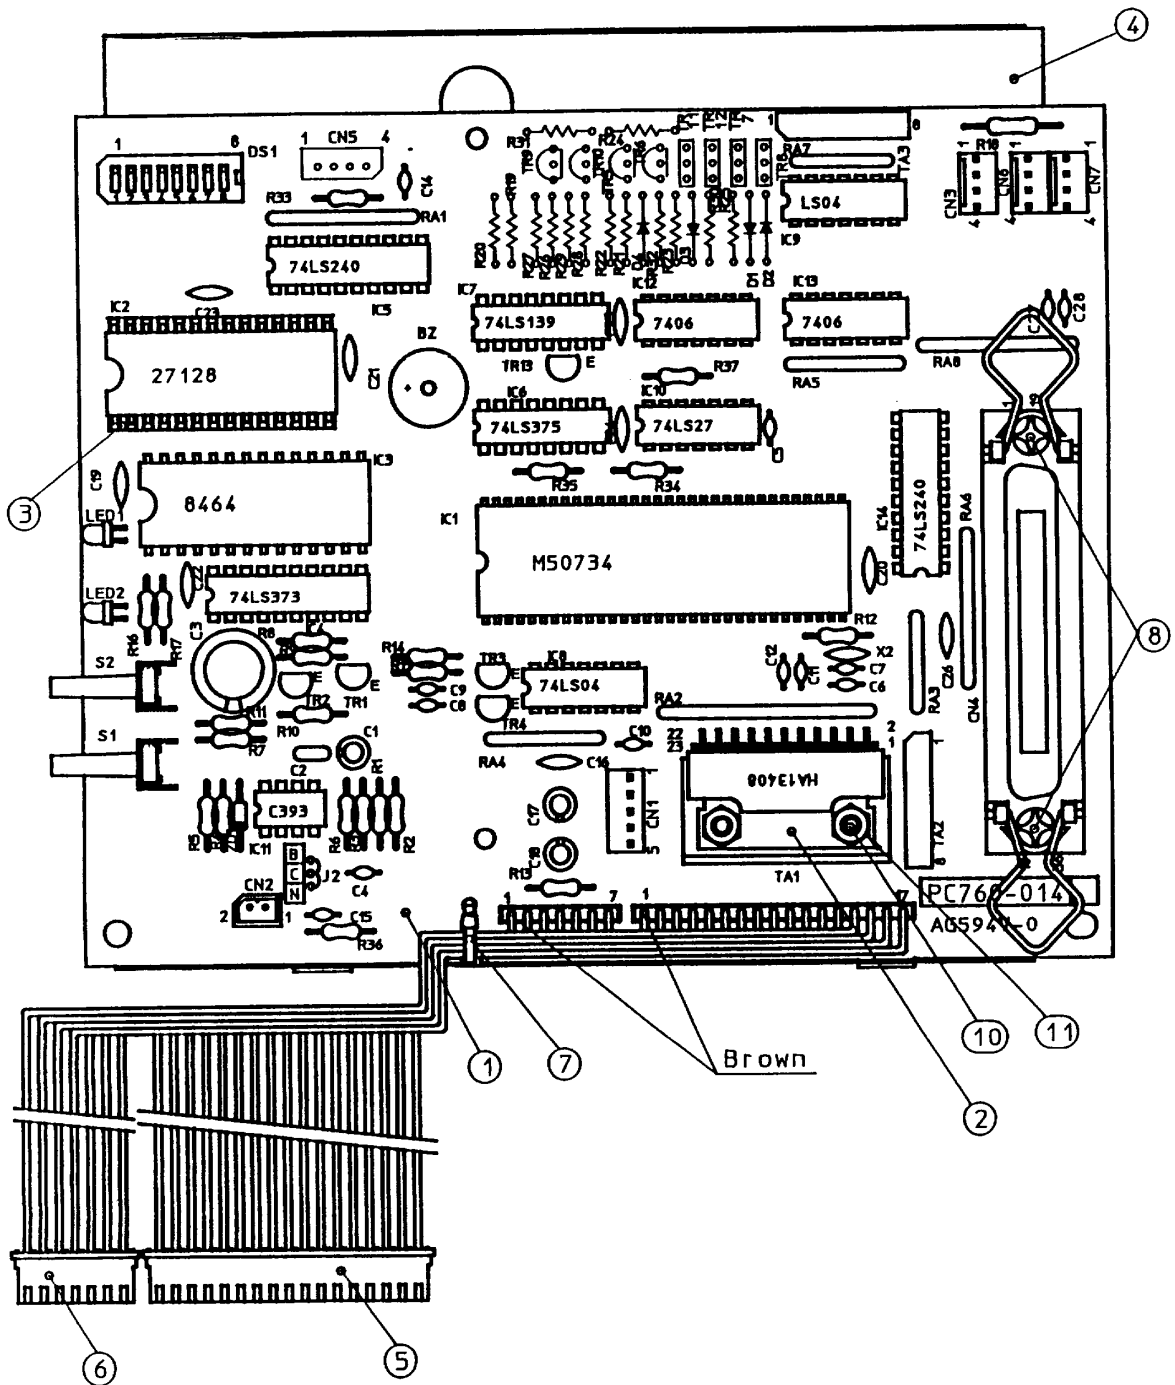


iDP3540

Serial Control PCB

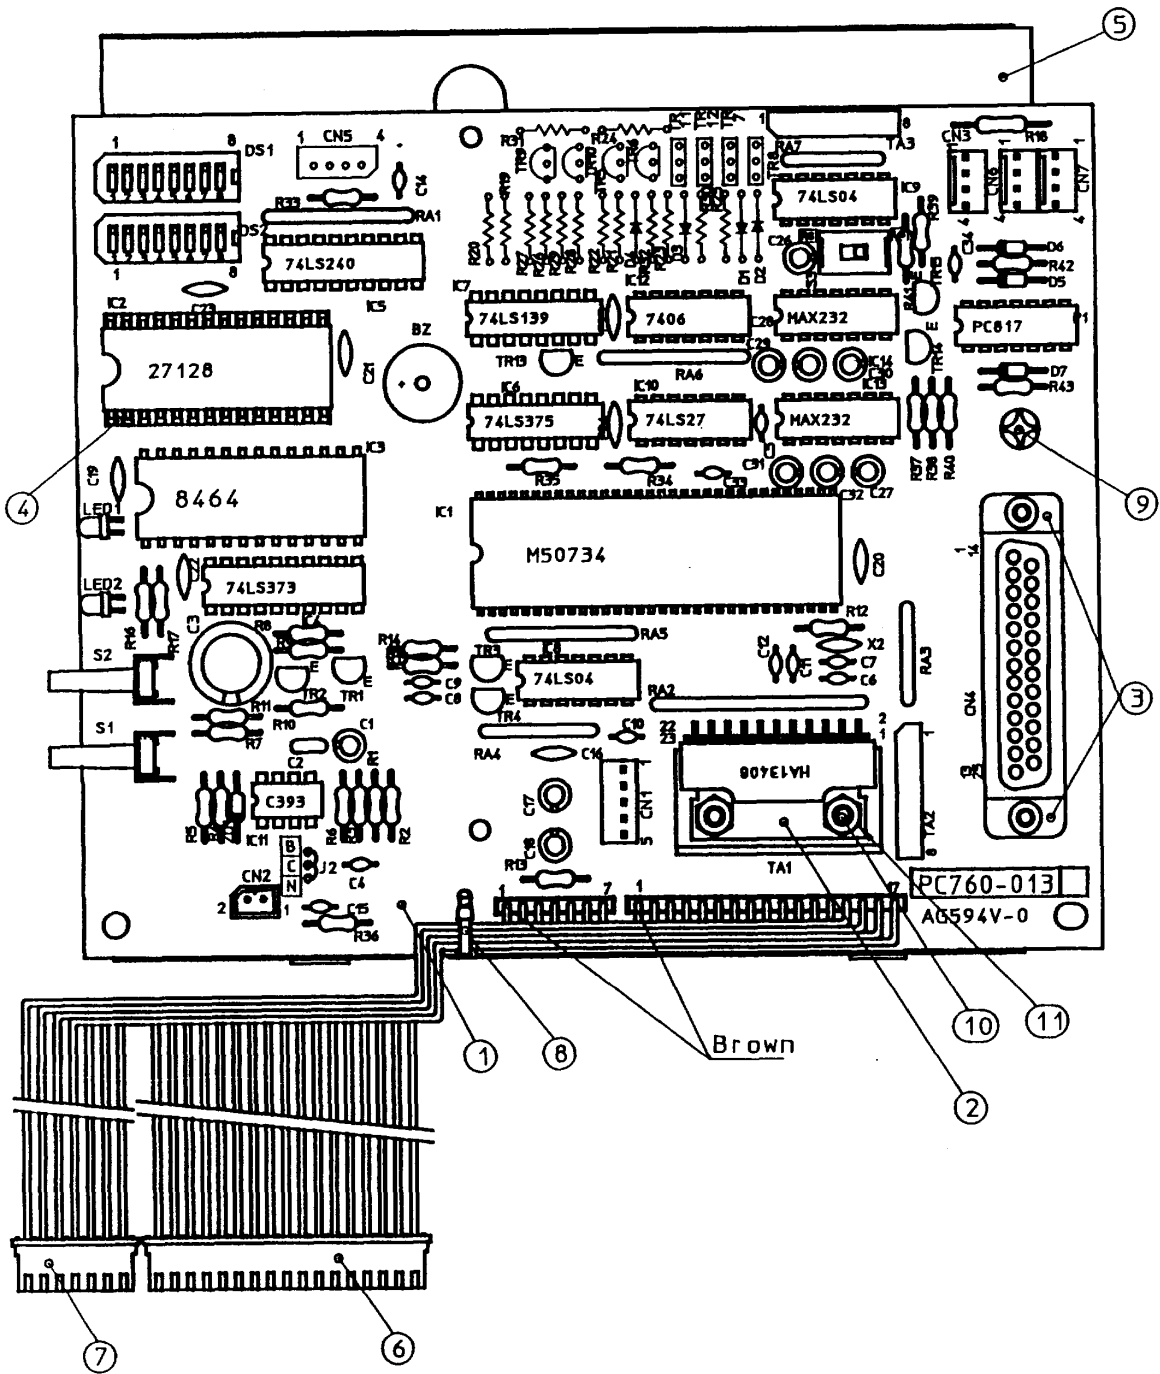

iDP3540

RS422A Control PCB

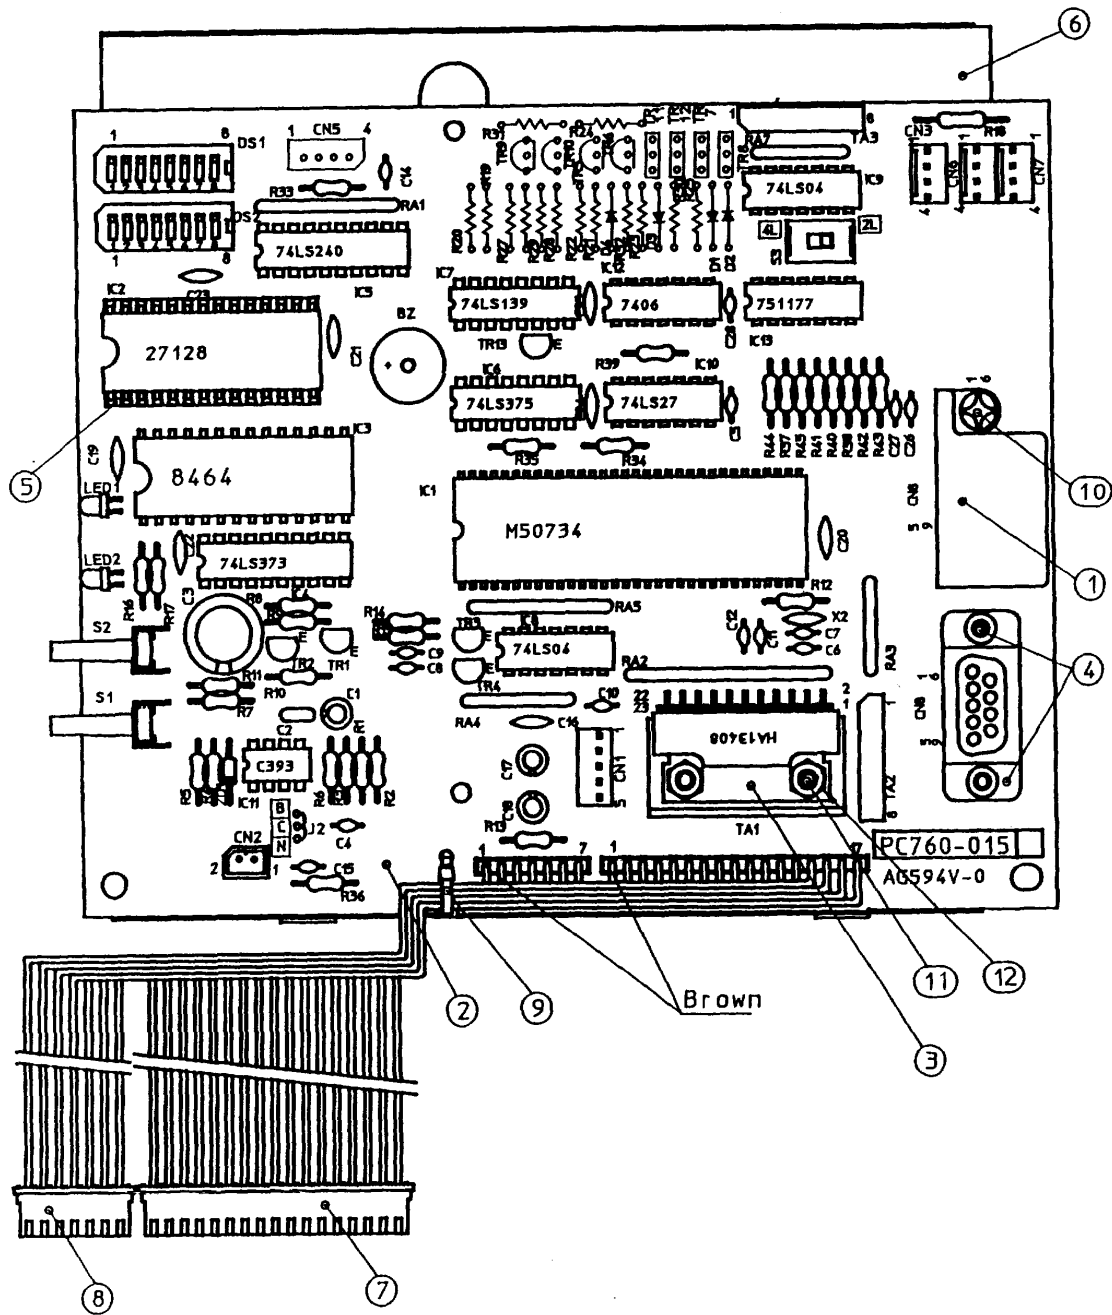

PARTS LIST

MAIN CONTROL BOARD UNIT

iDP3541-PF / RF / XF

Symbol	Parts No.	Description	Q'ty	iDP3541 -PF	iDP3541 -RF	iDP3541 -XF
CN	1	E 48000260 Connector B5P-SHF-1	1	<-	<-	<-
	2	E 4800-690 Connector 5267-02A	1	<-	<-	<-
	3, 6, 7	E 48000265 Connector 5054-04A	3	<-	<-	<-
	4	E 48000270 Connector FCN-684J036-L / U	1	<-		
		E 48000280 D-Sub Connector FCN-674J025-L / C	1		<-	
	5	E 48000350 Connector 5267-04A	1	<-	<-	<-
	8	E 48000360 D-Sub Connector FCN-674J009-L/C	1			<-
BZ	E 7151-120	Buzzer MEB-12-5	1	<-	<-	<-
S	1, 2	E 5102-450 Key Switch SKHHNH	2	<-	<-	<-
	3	E 5104-340 Slide Switch MMS-A-2-2N	1		<-	<-
DS	1	E 5103-400 Dip Switch SCS-08A	1	<-		
	1, 2	E 5103-400 Dip Switch SCS-08A	2		<-	<-
IC	1	E 104-200 LSI M50734SP	1	<-	<-	<-
	2	E 104-340 LSI 27C128-20J	1	<-	<-	<-
	3	E 104-330 LSI MB8464A-15LP	1	<-	<-	<-
	4	E 201-811 TTL HD74LS373P	1	<-	<-	<-
	5, 14	E 201-821 TTL HD74LS240P	2	<-		
	5	E 201-821 TTL HD74LS240P	1		<-	<-
	6	E 2010231 TTL HD74LS375P	1	<-	<-	<-
	7	E 201-831 TTL HD74LS139P	1	<-	<-	<-
	8, 9	E 201-611 TTL HD74LS04P	2	<-	<-	<-
	10	E 201-720 TTL HD74LS27P	1	<-	<-	<-
	11	E 202-610 IC uPC393C	1	<-	<-	<-
	12, 13	E 2010201 TTL HD74LS06P	2	<-		
	12	E 2010201 TTL HD7406P	1		<-	<-
	13, 14	E 2010040 IC MAX232CPE	2		<-	
	13	E 202-720 IC SN751177BP	1			<-

PARTS LIST

MAIN CONTROL BOARD UNIT

iDP3541-PF / RF / XF

Symbol	Parts No.	Description	Q'ty	iDP3541 -PF	iDP3541 -RF	iDP3541 -XF
X 2	E 501-150	X'tal CSA 7.3MT40	1	<-	<-	<-
D 1-4	E 400-200	Diode MPG06D-G3	4	<-	<-	<-
5-7	E 400-041	Diode 1S2076	3	<-	<-	<-
ZD 1	E 403-061	Zener Diode RD3.OEL1	1	<-	<-	<-
LED1, 2	E 480-290	LED SEL2310G	2	<-	<-	<-
TR 1	E 319-117	Transistor 2SA1175 (HF)	1	<-	<-	<-
2-6	E 359-040	Transistor KSC945C (Y)	8	<-	<-	<-
9,10						
13						
2-6	E 359-040	Transistor KSC945C (Y)	10		<-	
9,10						
13-15						
7,11	E 327-050	Transistor 2SB744A (Q,P)	2	<-	<-	<-
8,12	E 379-035	Transistor 2SD794A (Q,P)	2	<-	<-	<-
TA 1	E 390-100	Tr. Array HA13408	1	<-	<-	<-
2, 3	E 390-140	Tr. Array STA301A	2	<-	<-	<-
P 1	E 391-080	Photo Coupler PC837	1		<-	
C 1	E 2001-650	El. Cap. 1uF / 50	1	<-	<-	<-
2	E 2310-220	My. Cap. DMY21H473K	1	<-	<-	<-
3	E 2047-300	El. Cap. FS0H4732	1	<-	<-	<-
4, 5,	E 2147-090	C. Cap. DD003-298B471K50	3	<-		
27						
4, 5	E 2147-090	C. Cap. DD003-298B471K50	2		<-	<-
6, 7	E 2110-800	C. Cap. DD107RH101J50	2	<-	<-	<-
8, 9,	E 2110-810	C. Cap. DD003-298B102K50	5	<-		<-
11,12						
15						

PARTS LIST

MAIN CONTROL BOARD UNIT

iDP3541-PF / RF / XF

Symbol	Parts No.	Description	Q'ty	iDP3541 -PF	iDP3541 -RF	iDP3541 -XF
R 6	E 3473-041	Re. 1 / 4W 47 K J	1	<-	<-	
6,44	E 3473-041	Re. 1 / 4W 47 K J	3			<-
45						
8,13	E 3101-041	Re. 1 / 4W 100 J	2	<-		<-
8,13	E 3101-041	Re. 1 / 4W 100 J	4		<-	
42, 43						
9,11	E 3103-041	Re. 1/4W 10 K J	8	<-	<-	<-
19,20						
25-27						
32						
10	E 3623-041	Re. 1/4W 62 K J		<-	<-	<-
12	E 3105-041	Re. 1/4W 1 M J		<-	<-	<-
16,17	E 3331-041	Re. 1/4W 330 J		<-	<-	<-
18	E 3152-020	Me. Re. RSMF 1B 1.5 J		<-	<-	<-
21,22	E 3223-041	Re. 1/4W 22 K J		<-	<-	<-
28,29						
23,24	E 3472-041	Re. 1/4W 4.7 K J		<-	<-	
30,31						
23,24	E 3472-041	Re. 1/4W 4.7 K J				<-
30,31						
42,43						
38,40	E 3221-041	Re. 1/4W 220 J			<-	
40,41	E 3100-041	Re. 1/4W 10 J				<-
RA 1	E 3103-130	Re. Array RGLD 8 × 103J	1	<-		
1, 5	E 3103-130	Re. Array RGLD 8 × 103J	2		<-	<-
2	E 3103-180	Re. Array RGLD 12 × 103J	1	<-	<-	<-
3, 7	E 3101-120	Re. Array RGLD 3Y102J	2	<-	<-	<-
4	E 3101-130	Re. Array RGLD 6 × 102J	1	<-	<-	<-
5	E 3103-190	Re. Array RGLD 6 × 103J	1	<-		
6, 8	E 3322-070	Re. Array RGLD 8 × 332J	2	<-		
6	E 3322-070	Re. Array RGLD 8 × 332J	1		<-	

PARTS LIST

MAIN CONTROL BOARD UNIT

iDP3541-PF / RF / XF

Symbol	Parts No.	Description	Q'ty	iDP3541 -PF	iDP3541 -RF	iDP3541 -XF
1		PC Board	<1>	<-	<-	
	E 4002-360	Blind Plate	1			<-
2	E 4010-360	Heatsink	1	<-	<-	
		PC Board	<1>			<-
3	E 48000285	D-Sub Connector Holder FCN-770A68	1		<-	
	E 9901-010	IC Socket DILB28P-8J	1	<-		
	E 4010-360	Heatsink	1			<-
4	E 9901-010	IC Socket DILB28P-8J	1		<-	
	E 4002-350	Shield Plate	1	<-		
	E 48000285	D-Sub Connector Holder FCN-770A68	1			<-
5	E 4002-350	Shield Plate	1		<-	
	E 48000335	Cord Assy MMH5395-26-170-17	1	<-		
	E 9901-010	IC Socket DILB28P-8J	1			<-
6	E 48000335	Cord Assy MMH5395-26-170-17	1		<-	
	E 48000340	Cord Assy MMH5395-26-170-7	1	<-		
	E 4002-350	Shield Plate	1			<-
7	E 48000340	Cord Assy MMH5395-26-170-7	1		<-	
	E 4013-100	Cable Binder SKB-80	1	<-		
	E 48000335	Cord Assy MMH5395-26-170-17	1			<-
8	E 4013-100	Cable Binder SKB-80	1		<-	
	ST1P 3 × 12	Screw M3 × 12	2	<-		
	E 48000340	Cord Assy MMH5395-26-170-7	1			<-
9	ST1P 3 × 6	Screw M3 × 6	1		<-	
	SMP 3 × 8	Screw M3 × 8	2	<-		
	E 4013-100	Cable Binder SKB-80	1			<-
10	SMP 3 × 8	Screw M3 × 8	2		<-	
	ST1P 3 × 6	Screw M3 × 6	2			<-
11	N 3-1	Nut M3	2		<-	
	SMP 3 × 8	Screw M3 × 8	2			<-
12	N 3-1	Nut M3	2			<-