

CR-2000 SERIES CASH DRAWER USER'S MANUAL

POSIFLEX



FCC Notes:

Rev. Original

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions manual, may cause interference to radio communications. It has been tested and found to comply with limits for a Class A digital device pursuant to subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference in which case the user at his own expense will be required to take whatever measures to correct the interference.

Warranty Limits:

Warranty terminates automatically when any person other than the authorized technicians opens the machine. The user should consult his/her dealer for the problem happened. Warranty voids if the user does not follow the instructions in application of this merchandise. The manufacturer is by no means responsible for any damage or hazard caused by improper application.

About This Manual:

Posiflex has made every effort for the accuracy of the content in this manual. However, Posiflex will assume no liability for any technical inaccuracies or editorial or other errors or omissions contained herein, nor for direct, indirect, incidental, consequential or otherwise damages, including without limitation loss of data or profits, resulting from the furnishing, performance, or use of this material.

This information is provided "as is" and Posiflex Inc. expressly disclaims any warranties, expressed, implied or statutory, including without limitation implied warranties of merchantability or fitness for particular purpose, good title and against infringement.

The information in this manual contains only essential hardware concerns for general user and is subject to change without notice. Posiflex reserves the right to alter product designs, layouts or drivers without notification. The system integrator shall provide applicative notices and arrangement for special options utilizing this product. The user may find the most up to date information of the hardware from web sites: <http://www.posiflex.com> or <http://www.posiflex.com.tw>

All data should be backed-up prior to the installation of any drive unit or storage peripheral. Posiflex will not be responsible for any loss of data resulting from the use, disuse or misuse of this or any other Posiflex product.

All rights are strictly reserved. No part of this documentation may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, or otherwise, without prior express written consent from Posiflex Inc. the publisher of this documentation.

© Copyright Posiflex Inc. 2006

All brand and product names and trademarks are the property of their respective holders.

BRIEF INTRODUCTION

INTRODUCTION

This specification defines the CR2000 series of Posiflex products. This product series is a flip-top type cash drawer. This series provides Aluminum alloy die cast base and wearproof stainless steel top surface with zero externally accessible screw.

FEATURES

- Flip-top design
- Rugged design with no screw to be accessed from outside
- Contemporary style
- Advanced electronics that extends the **MTBF** (Mean Time Between Failure)
- Three-position lock for maximum cash security
- Check slot for non-cash or large-bill transaction without opening drawer
- 6 fixed bill compartments
- 8 coin compartments. Partially adjustable in size and number by use of coin compartment separator
- Provided with various interface selection including direct (printer) drive, dedicated RS232, USB
- Optional additional removable tray. Also optional tray cover with lock
- WEPOS certified
- 2 color choices: Ivory and Black

MODEL NUMBER & INTERFACE

Model Number	Interface	Security Code	Power / Source
CR-2000	Printer drive	N. A.	12/24 V Pulse / Printer
CR-2004	Dedicated RS232 serial	N. A.	12VAC / Adaptor
CR-2005	USB	USB PID	12VAC / Adaptor

CARTON CONTENTS

1. Cash drawer pre-assembled.
2. User's manual.
3. Separators of coin compartment: 5 pcs.
4. Key 2pcs: There is a key serial No. sticker on the cash drawer bottom plate. If user lost the key he/she can order the key according to this number.

5. Signal Cable depend on model

- a). For CR-2000: The standard signal cable is 21863018010 which has a 8 pin plug at one end to connect to the cash drawer and a 6 pin plug at the other end to connect to the POS system/printer. This cable serves for most popularly used POS equipment such as all Posiflex POS terminals, all Posiflex POS printers, most Epson POS printers, most Star POS printers and all other compatibles. The user may cut the 6 pin end and assemble this free end according to his POS printer specification if the POS printer used utilizes different connection. The cable connection on the wires is as below:

Wire color	RJ45	Function
Red	Pin 1	Drawer open sense
Blue	Pin 2	Drawer open sense return
Green	Pin 7	+ 24V to solenoid
Yellow	Pin 8	Drawer kick pulse

- b). For CR-2004: Serial signal cable (RS232 conversion cable 21863259900/21863159900).
- c). For CR-2005: USB cable (USB Cable 21863250800/21863150800)


6. Power Source depend on model

- a). For CR-2000: not applicable
- b). For CR-2004: Power adapter 12VAC 1.5A
- c). For CR-2005: Power adapter 12VAC 1.5A

INSTALLATION


Coin compartment adjust:

The coin compartment separator can be removed from and inserted till click into the grooves in adjustable coin compartment zones for appropriate compartment size.

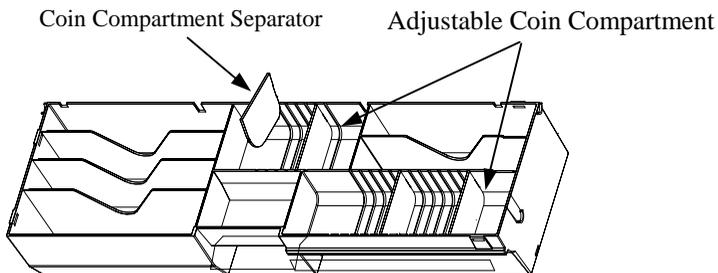

CR-2000:

- 1). Connect the 8 pin plug of CR cable to cash drawer and the 6 pin plug to CR port of POS system or POS printer as shown below:

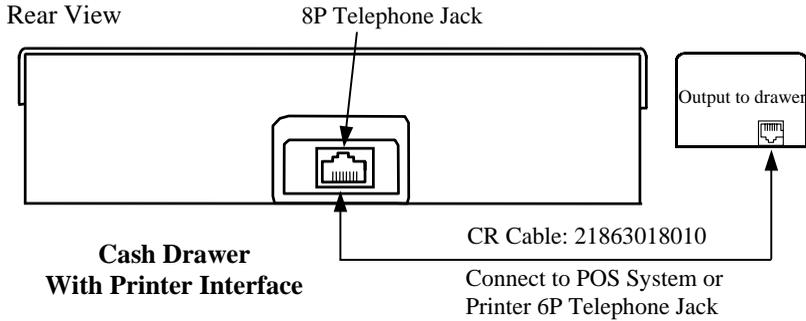


- 2). Turn the keylock to standby position.

CR-2004:

- 1). Connect the 4 pin RJ11 plug of RS232 conversion cable to the RJ 11 jack at the rear side of CR-2004 and connect the DB 9 pin connector to RS232 port of host (PC or POS) system as shown in drawing below.
- 2). Check the specification of power adaptor on its nameplate. Insert the power adaptor into the correct power outlet. Insert the output plug to the power jack at rear side of CR-2004 to supply power for drawer kickout.
- 3). Turn the keylock to standby position.
- 4). Set the communication protocol of the RS232 port in host system to use baud rate of either 9600 bps or 19200 bps.

Rear View

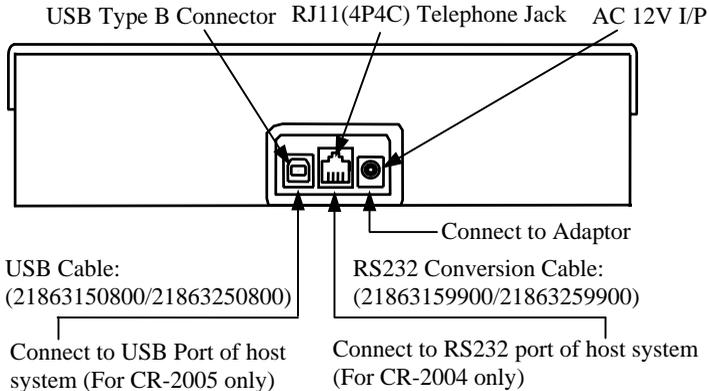


Cash Drawer With RS232 & USB Interface

CR-2005:

- 1). The drawer number (PID) is default to be 7. Refer to the guidance for “Jumper Setting Change” below if the PID has to be changed.
- 2). Connect USB type B connector (more or less square one) of USB cable to the USB connector at rear side of CR-2005 and the type A connector end to USB port of host (PC or POS) system as shown in drawing above.
- 3). Check the specification of power adaptor on its nameplate. Insert the power adaptor into the correct power outlet. Insert the output plug to the power jack at rear side of CR-2005 to supply power for drawer kickout.
- 4). Turn the keylock to standby position.
- 5). Install the USB utility driver from Posiflex Product Information CD with Posiflex POS system or visit our web sites <http://www.posiflex.com> or <http://www.posiflex.com.tw> or <http://www.posiflexusa.com> for latest updates.

Jumper Setting Change:

- 1). Use key to open the cash drawer. Take out the removable tray and you can find a control board in the bottom. The lay out of the control board is illustrated below.

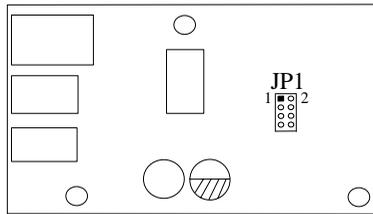

- 2). USB PID select: jumpers over pins 3-4, 5-6 or 7-8 define a drawer number for the cash drawer as in below table so that this cash drawer is going to respond accordingly in USB communication. Please note that within each system there should never be any 2 USB interface cash drawers carrying the same drawer number.

USB PID \ JP1 pins	0	1	2	3	4	5	6	7
3-4	Short	Short	Short	Short	Open	Open	Open	Open
5-6	Short	Short	Open	Open	Short	Short	Open	Open
7-8	Short	Open	Short	Open	Short	Open	Short	Open

UPOS and WEPOS driver application:

Please first find in Posiflex Product Information CDROM or download from Posiflex web sites for UPOS driver setup. In this application CR-2004 responds to OpenDrawer command only; CR-2000/2004 are compliant to UPOS version 1.7 and CR-2005 is compliant to UPOS version 1.8 and is also WEPOS certified.

SPECIFICATIONS

MECHANICAL: Dimensions:
481.5 (W) x 174.9 (D) x 101.5 (H) mm
19.0" (W) x 6.9" (D) x 4.0" (H)
Weight: t.b.f. Kg
Removable tray with a lock-on cover (option)

ELECTRICAL:

Power Source

Solenoid Drive (for CR-2000)

Pulse Amplitude	12 to 24 VDC
Pulse Width	100 to 250 msec
Pulse Duty Cycle	10% max.
Max. Current Consumption	0.75A @ 12 VDC / 1A @ 24 VDC

AC Adaptor (for CR-2004/2005)

Input Voltage	120 VAC \pm 10 % / 240 VAC \pm 10 % @50 -60 Hz
Output Voltage	12 VAC at 1.5 A

Interface

Direct Drive: CR-2000

Serial (RS232C)

	CR-2004
Baud rate	9600; 19200
Parity	none
Data Bits	8
Stop Bits	1

USB (1.1): CR-2005

Security Code

CR-2005	USB PID
---------	---------

Drawer Open Sense

CR-2000	Drawer open sense circuit shorts when drawer open
---------	---

CR-2004

Pin 9 in DB9 connector goes high when drawer open

CR-2005

Through USB driver

KEYLOCK OPERATION




Keylock

Lock (🔒): Physically lock the drawer.


Open (🔓): Open the drawer by the key.

Standby (⚡): Automatically open the drawer by POS printer or POS system or interface signal control

STRUCTURE

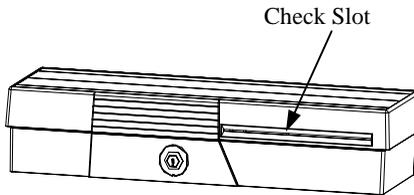

Inside CR-2000/ 2004/ 2005

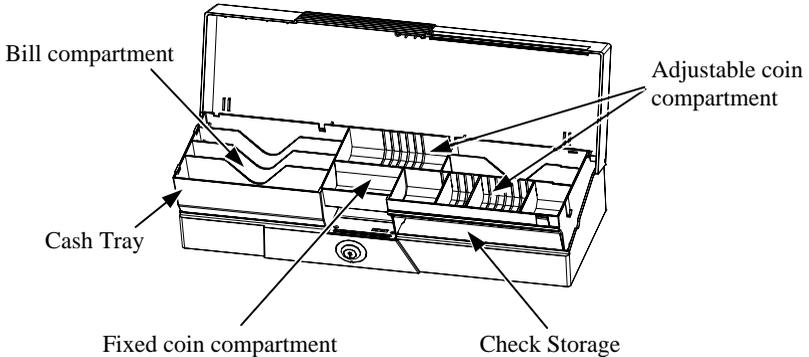

POSIFLEX 
警告使用者 T31454
這是甲類的資訊產品，在居住的環境中使用時，可能會造成對候干擾，在這種情況下，使用者會被要求採取某些適當的對策。